

OPENSWIM PRO

návod

S710

Obsah

STAŽENÍ APLIKACE SHOKZ

JAK TO FUNGUJE

Jak nosit

Hlasitost

Multifunkční tlačítko

Další funkce

Přepínání mezi Bluetooth a MP3 režimem

Přenos souborů

Přepínání pořadí přehrávání MP3 hudby

Kontrola stavu baterie

ZAPNUTÍ/VYPNUTÍ

Párování

Tipy pro nabíjení

Záruka

PÉČE A ÚDRŽBA

Změna jazyka

Obnovení továrního nastavení

Multipoint párování

EQ režimy

Vypnutí multipoint párování

Přepínání EQ režimů

DALŠÍ FUNKCE

Ovládání sluchátek

Obsah balení

- OpenSwim Pro sluchátka
- OpenSwim Pro taška
- OpenSwim Pro krabice
- Magnetický nabíjecí kabel
- Plavecké špunty do uší

Stáhnutí aplikace Shokz



Shokz

Aplikace Shokz umožňuje přepínat mezi Bluetooth a MP3 režimy, spravovat multipoint párování, aktualizovat firmware, měnit EQ režimy, přepínat pořadí přehrávání MP3 hudby a další. Stáhněte si aplikaci nyní pro jednoduchý a bezproblémový zážitek z poslechu.

 
*Pouze pro omezené regiony.

Další informace naleznete na adrese userguide.shokz.net/openswimpro..

Apple a logo Apple jsou ochranné známky společnosti Apple Inc., registrované v USA a dalších zemích. Google Play je ochranná známka společnosti Google LLC.

Jak to funguje

Ovládání sluchátek

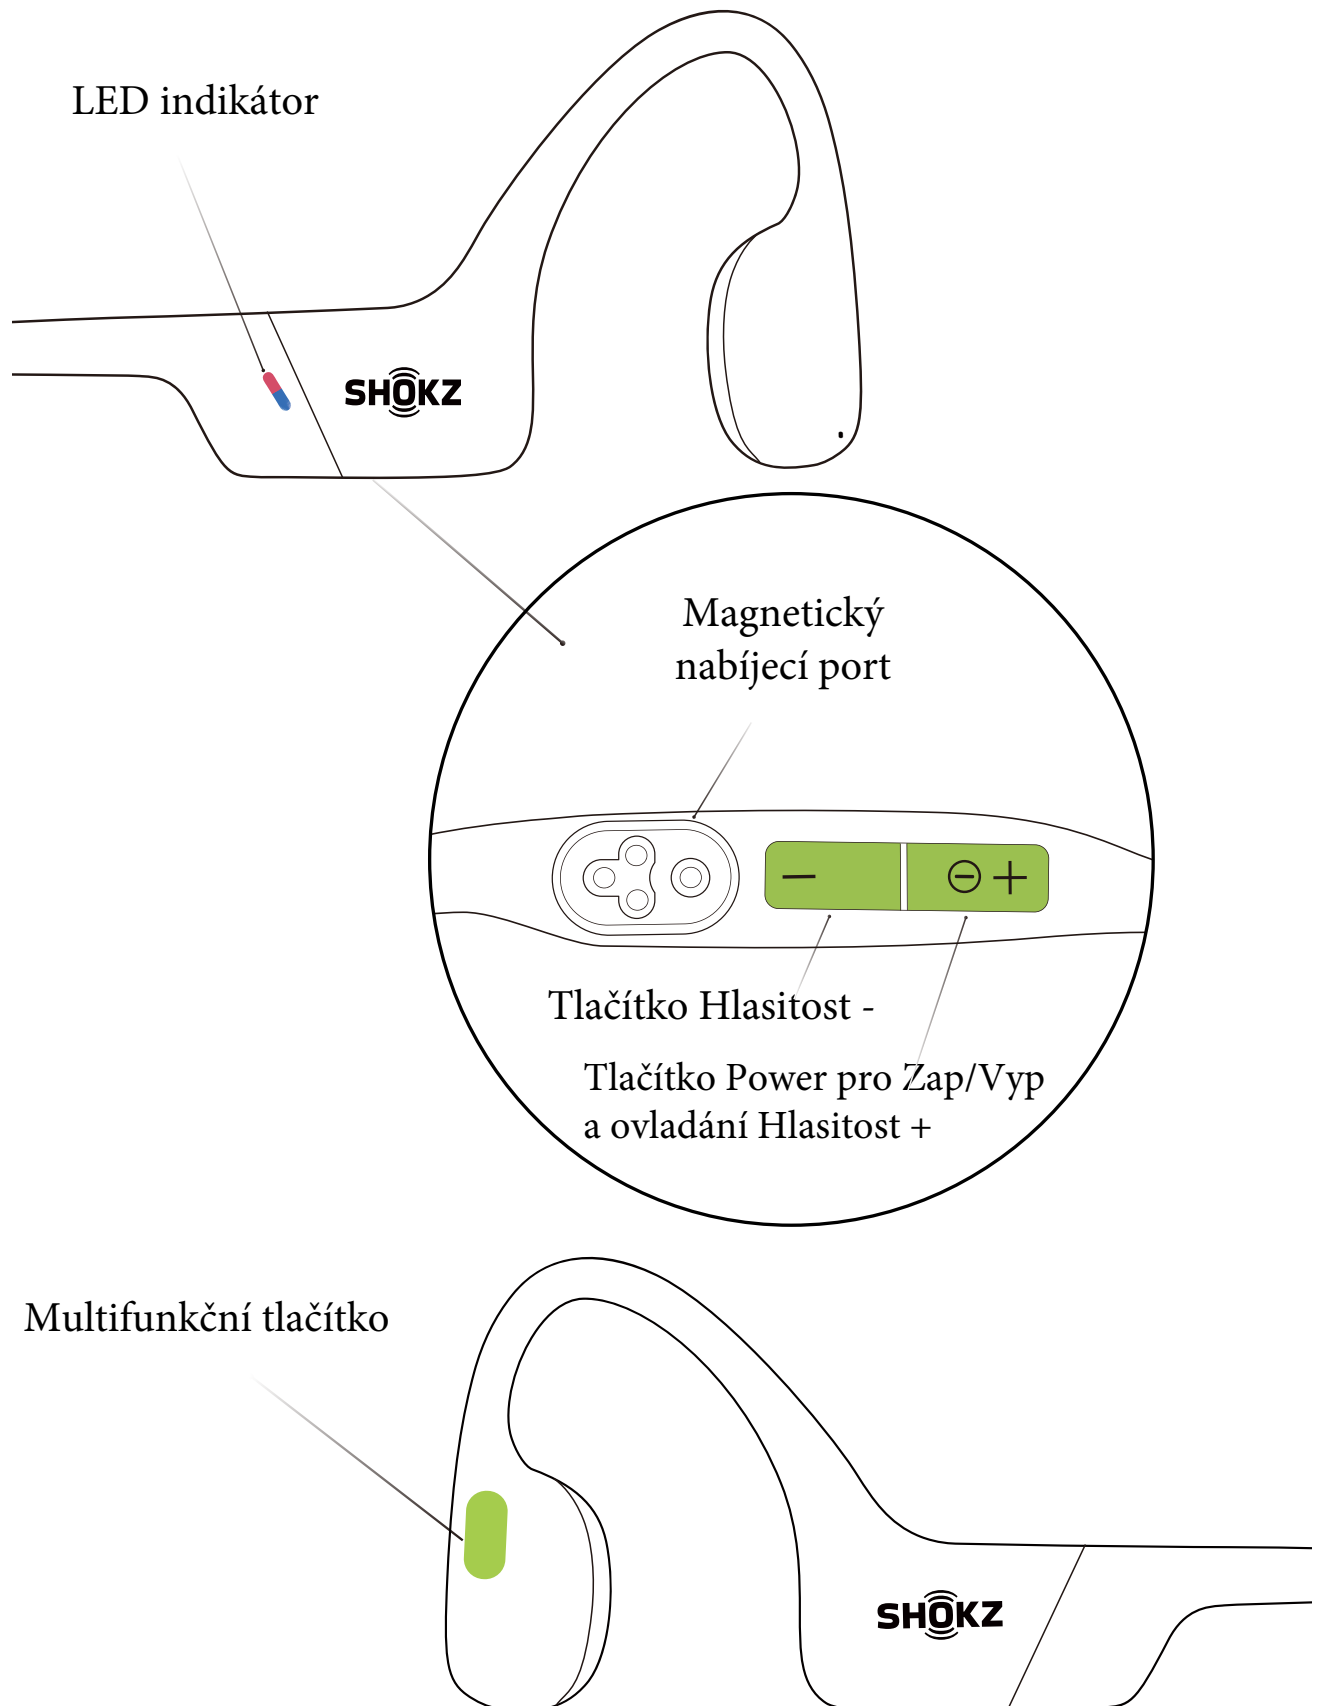

Zapnutí/Vypnutí (ON/OFF)



Tlačítko Power pro Zap/Vyp
a ovládání Hlasitost +

Zapnutí sluchátek:

Stiskněte a podržte tlačítko POWER, dokud LED indikátor nezačne blikat modře.

 
Uslyšíte tón zapnutí.

Vypnutí sluchátek:


Stiskněte a podržte tlačítko POWER, dokud LED indikátor nezačne blikat červeně.

Uslyšíte tón vypnutí.

Párování

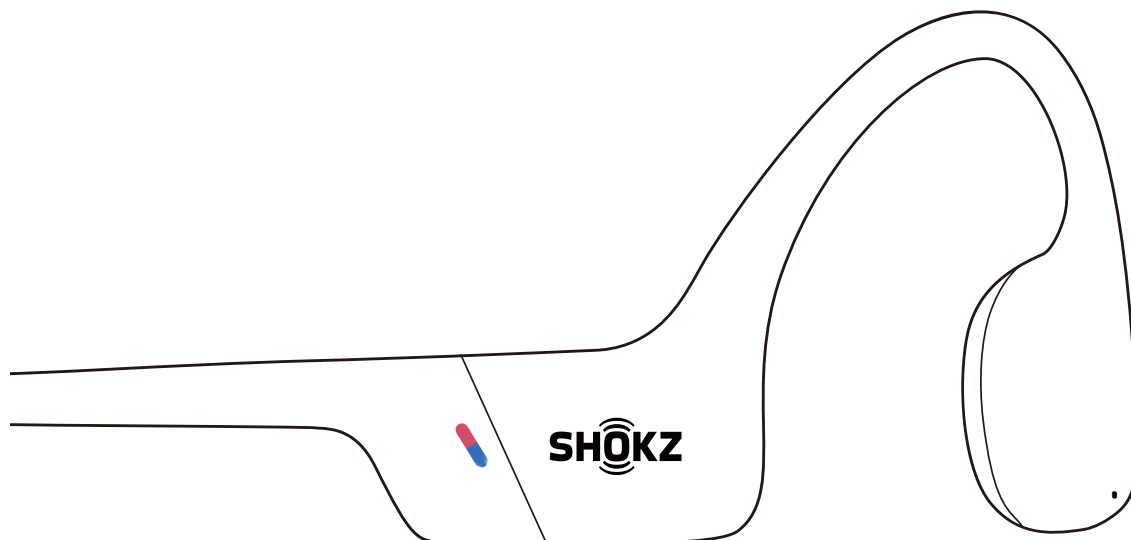


 1. Začněte s vypnutými sluchátky OpenSwim Pro.
2. Stiskněte a podržte tlačítko POWER po dobu 5 sekund, dokud LED indikátor nezačne blikat červeně a modře.

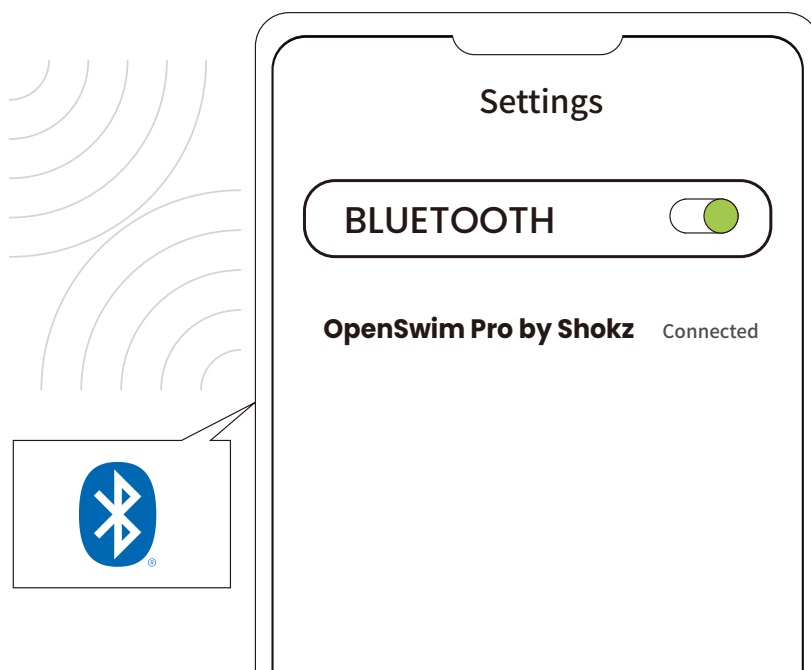

3. Otevřete nastavení Bluetooth na vašem zařízení a vyberte "OpenSwim Pro by Shokz". Jakmile zařízení potvrdí úspěšné spárování, jste připraveni.

 Jak nosit

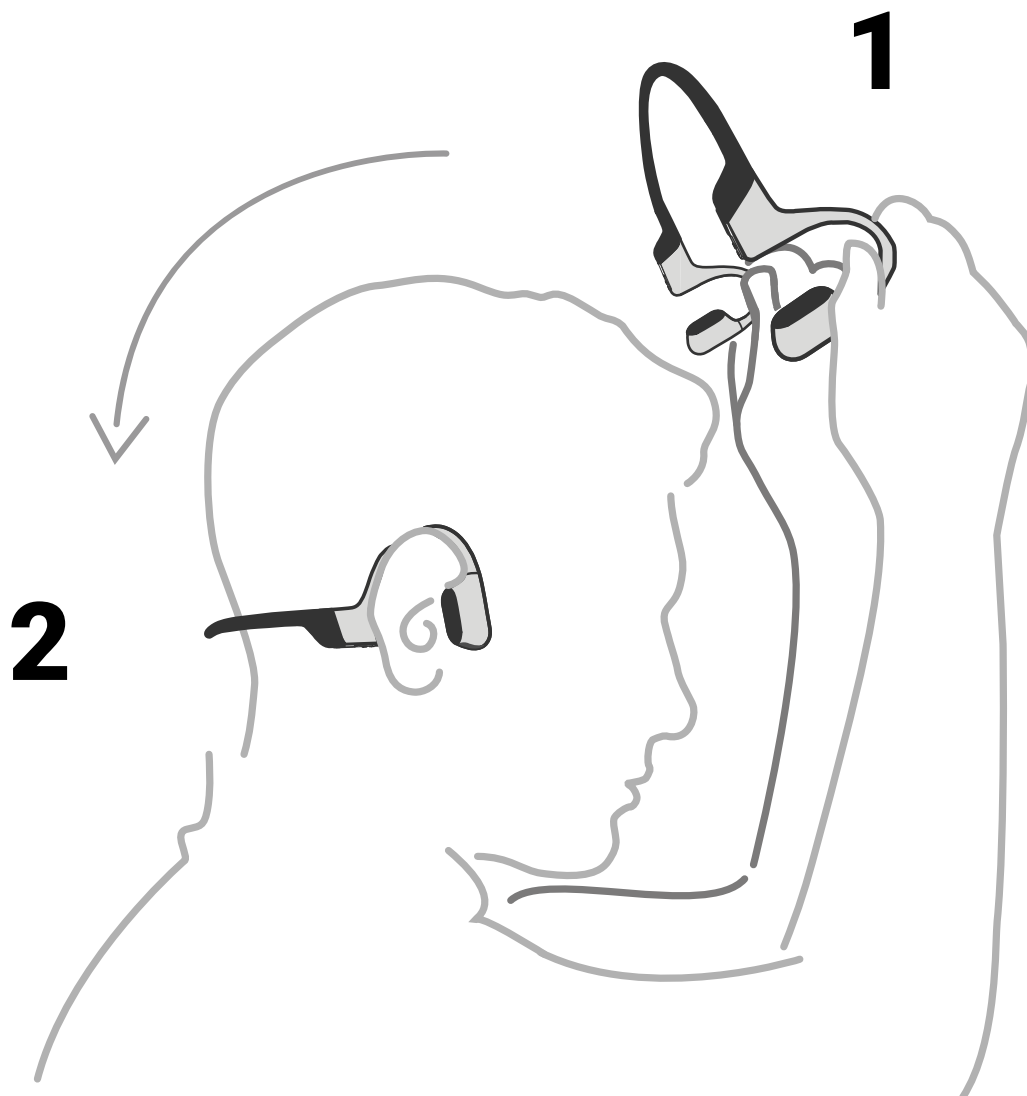


Zvedněte sluchátka, umístěte je zadní částí na krk, umístěte ušní háčky na uši a pak si vychutnejte hudbu!

*Špatné nošení sluchátek může způsobit nepohodlí. Snímače by měly ležet před vašimi ušima.

Hlasitost



 Ovládání hlasitosti při přehrávání audia:

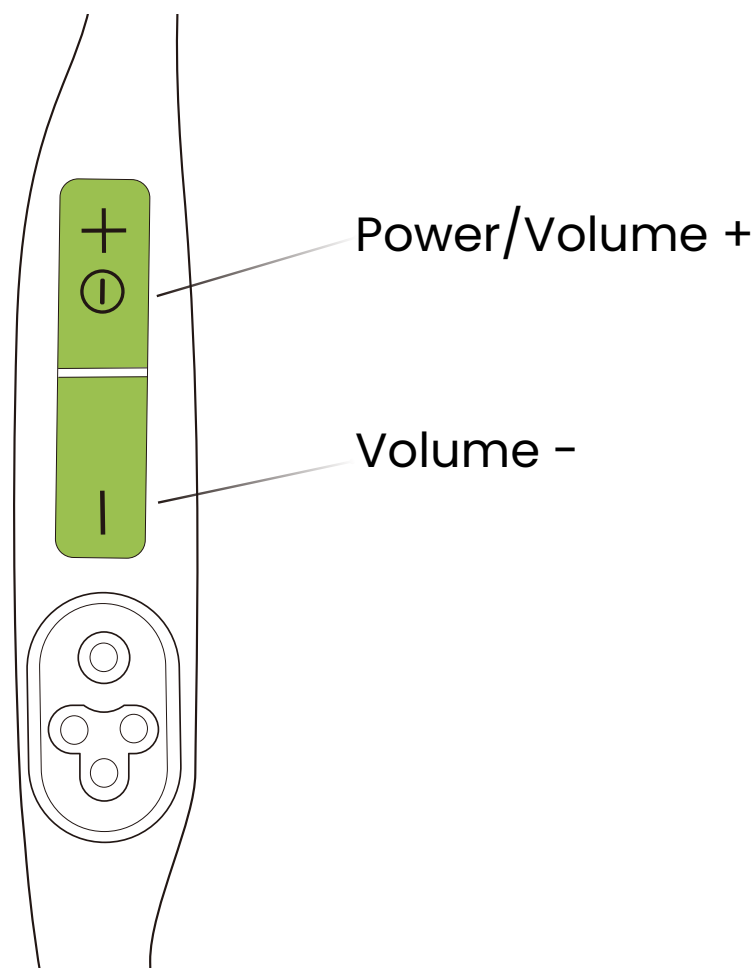

JAK změnit hlasitost:

Změňte hlasitost stisknutím tlačítek Volume + nebo Volume -

*Uslyšíte "pípnutí" při maximální hlasitosti.



* Poslech se sluchátky při vysoké hlasitosti může ovlivnit váš sluch a zvuk bude zkreslený.


Další funkce*

4QVTUJUMMBTPWIPBTJTUFOUBBBO	4UJTLOFBOPEUFVVMUJGVOL UMBOLPQPEPCVFLVOE
	Jednou klikn te na multifunk ní tlačítko
	Jednou klikn te na multifunk ní tlačítko
	Stiskn te a podržte multifunk ní tlačítko po dobu 2 sekund
Přijmout druhý hovor a ukon čit aktuální hovor	Přijímá se druhý hovor stiskn te a podržte multifunk ní tlačítko po dobu 2 sekund
	Během hovoru stiskn te a podržte sou asní tlačítka Hlasitost + a Hlasitost - po dobu 2 sekund
	Během hovoru stiskn te a podržte sou asní tlačítka Hlasitost + a Hlasitost - po dobu 2 sekund
Změnit jazyk	Ve stavu párování dvakrát klikn te na multifunk ní tlačítko (střední blikají červené a modré světlo)

* Platí pouze pro telefonní hovory, nikoli online hovory

* Můžete také předefinovat která tlačítka v aplikaci Shokz.

 
Switching between Bluetooth and MP3 Mode

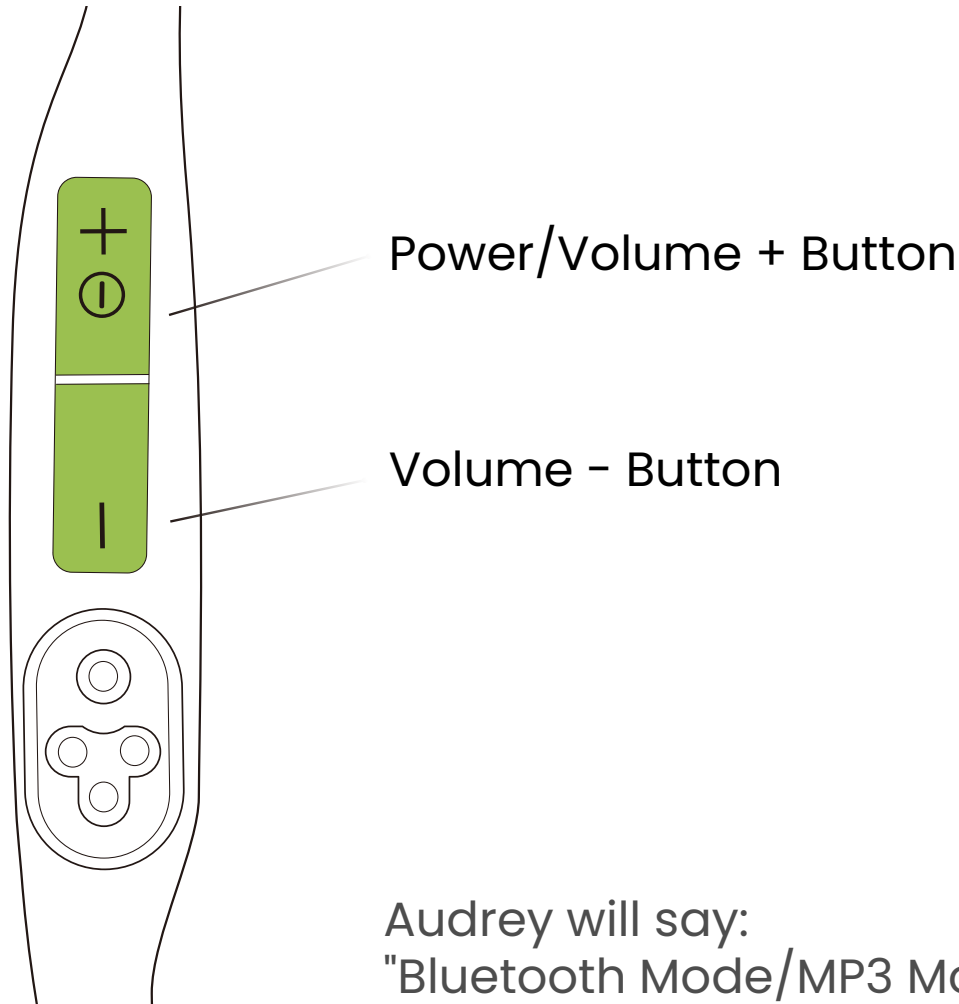

Press and hold the Volume + button and the Volume - button for 2 seconds until you hear the prompt tone.

*You can also use the Shokz App to easily switch between Bluetooth/MP3 modes, or redefine the buttons.

 Transferring Files

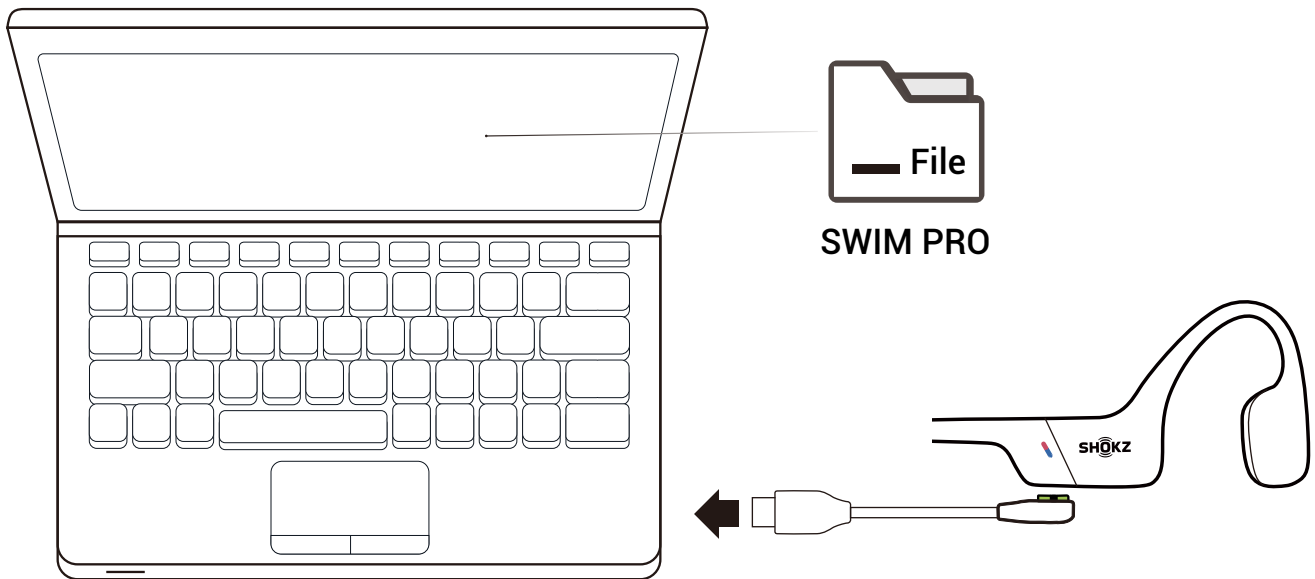


1. Connect OpenSwim Pro to your computer via the magnetic cable provided in the package.
2. A driver disk named **"SWIM PRO"** will appear on your computer. Open the **"SWIM PRO" disk** on your computer.
3. Import audio files (songs, audio books or folders) to the "SWIM PRO" disk.
4. Once the file transfer is complete, remove the "SWIM PRO" disk from your computer.

*Please do not force an interruption during the file transfer, as this may cause damage to the product.

*The following music file formats are currently supported by OpenSwim Pro:

Format	Bit rate	Sampling rate	Remarks
MP3	8kbps - 320kbps	8kHz-48kHz	Bit depth up to 16bit is supported.
FLAC	L0-L8 (1000kbps - 1900kbps)	8kHz-96kHz	Bit depth up to 24bit is supported.
WMA	5kbps - 320kbps	8kHz-48kHz	WMA Lossless, WMA Pro, WMA Voice, or encryption is not supported. Bit depth up to 16bit is supported.
WAV	32kbps - 1411kbps	8kHz-96kHz	Bit depth up to 24bit is supported.
AAC	8kbps - 320kbps	8kHz-48kHz	Bit depth up to 16bit is supported.
M4A	8kbps - 291kbps	8kHz-48kHz	Bit depth up to 16bit is supported.
APE	800kbps - 959kbps	8kHz-48kHz	Fast/Normal format only. Bit depth up to 16bit is supported.

 Switching the Order of MP3 Music Playback

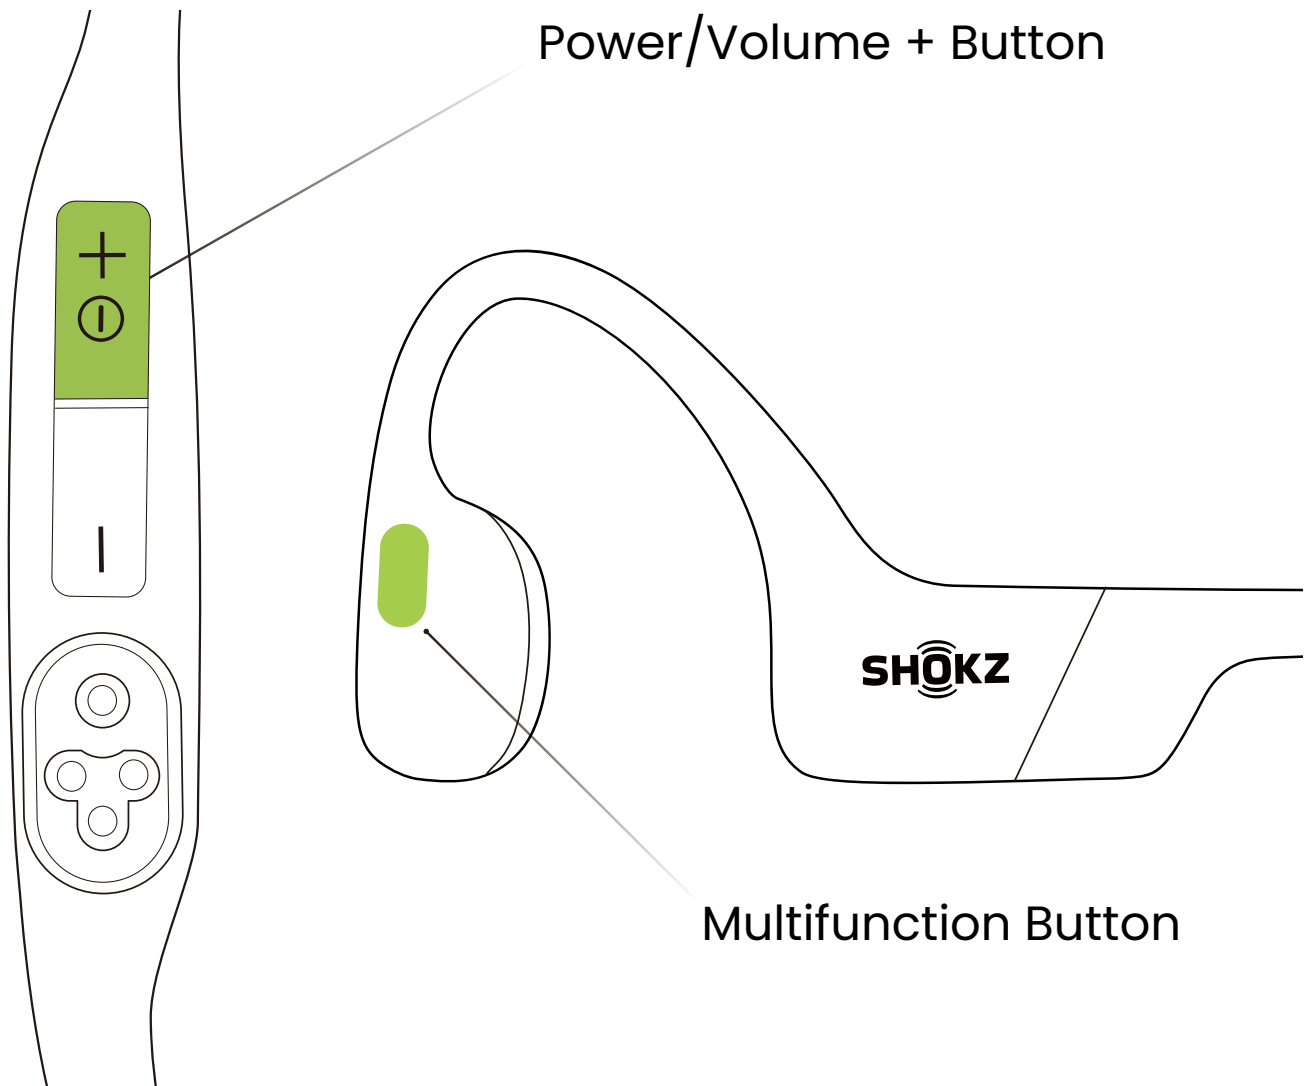

Audrey will say:
"Normal/Shuffle/Repeat"



 
Press and hold the multifunction button and the Volume + button for 2 seconds in MP3 mode until you hear the prompt tone.

*You can also use the Shokz App to easily switch the order of MP3 music playback.

Check Battery Status



Operate controls while audio is not playing

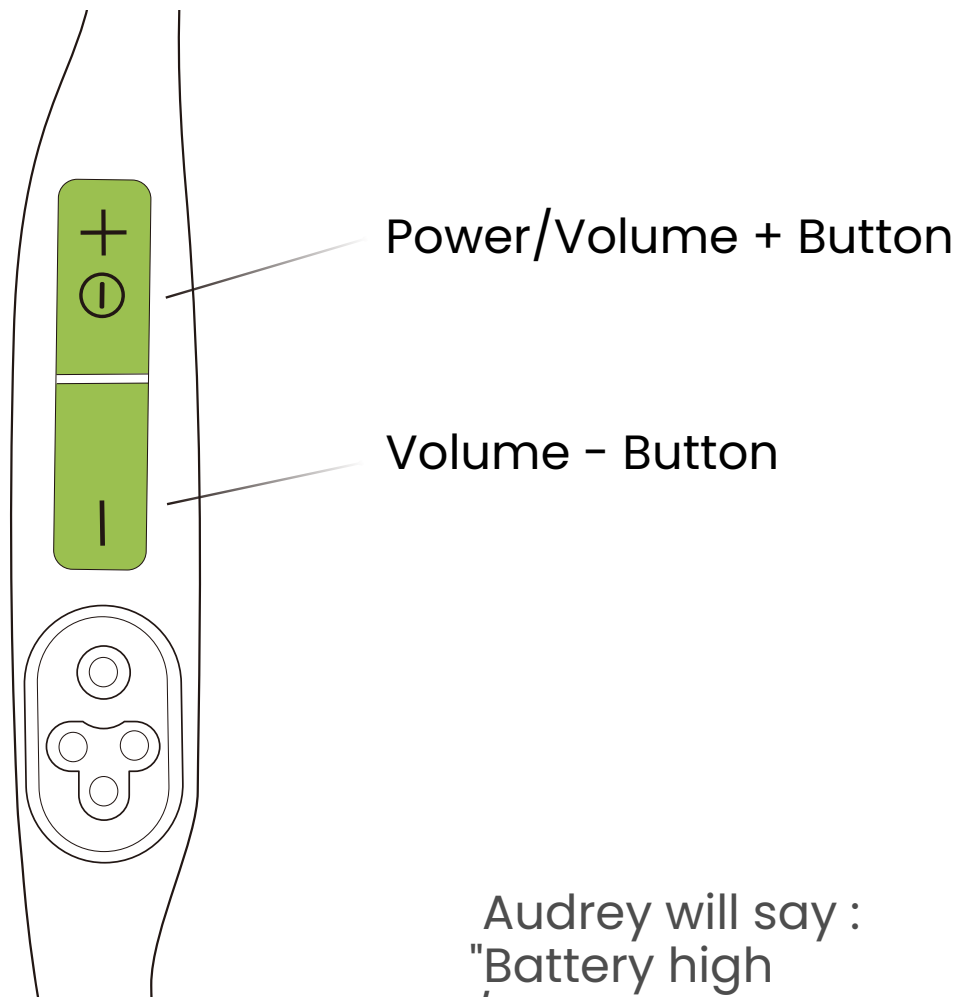

Audrey will say :
"Battery high
/Battery medium
/Battery low/Charge me"



How to check battery status :

Click the Volume + or Volume - button while music is paused, Audrey will tell you the battery status.

Extra Features

EQ Modes

There are 2 EQ modes in Bluetooth mode:



Standard Mode:
Balanced frequency
for listening to music.



Vocal Booster Mode:
Enhanced intermediate
frequencies for audiobooks,
podcasts, etc.

There are 2 EQ modes in MP3 mode:



Standard mode:
Frequency band balanced
for non-underwater scenarios.

 


Swimming Mode:
Specially crafted for swimming.
We recommend that you turn
this mode on while swimming
and use it with earplugs.

Switching EQ Modes



Operate controls while music is playing

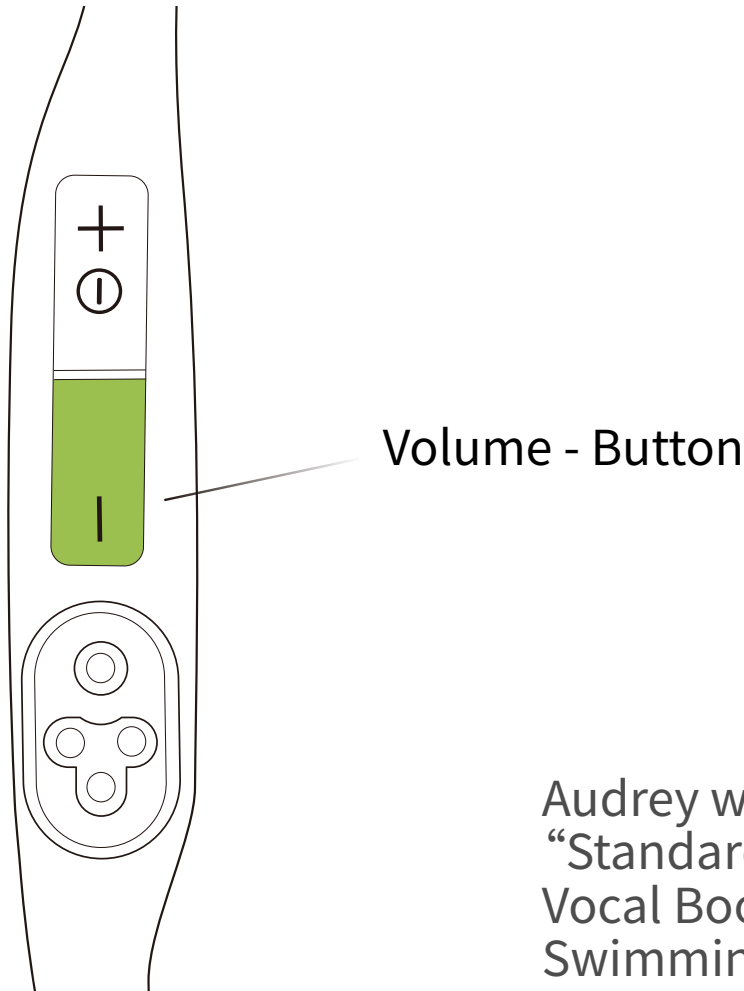

Audrey will say :
“Standard Mode/
Vocal Booster Mode/
Swimming Mode”

 


How to switch EQ mode:

Press and hold the Volume - button for 2 seconds while music is playing until you hear the prompt tone.

*You can also use the Shokz App to change the EQ mode



Multipoint Pairing

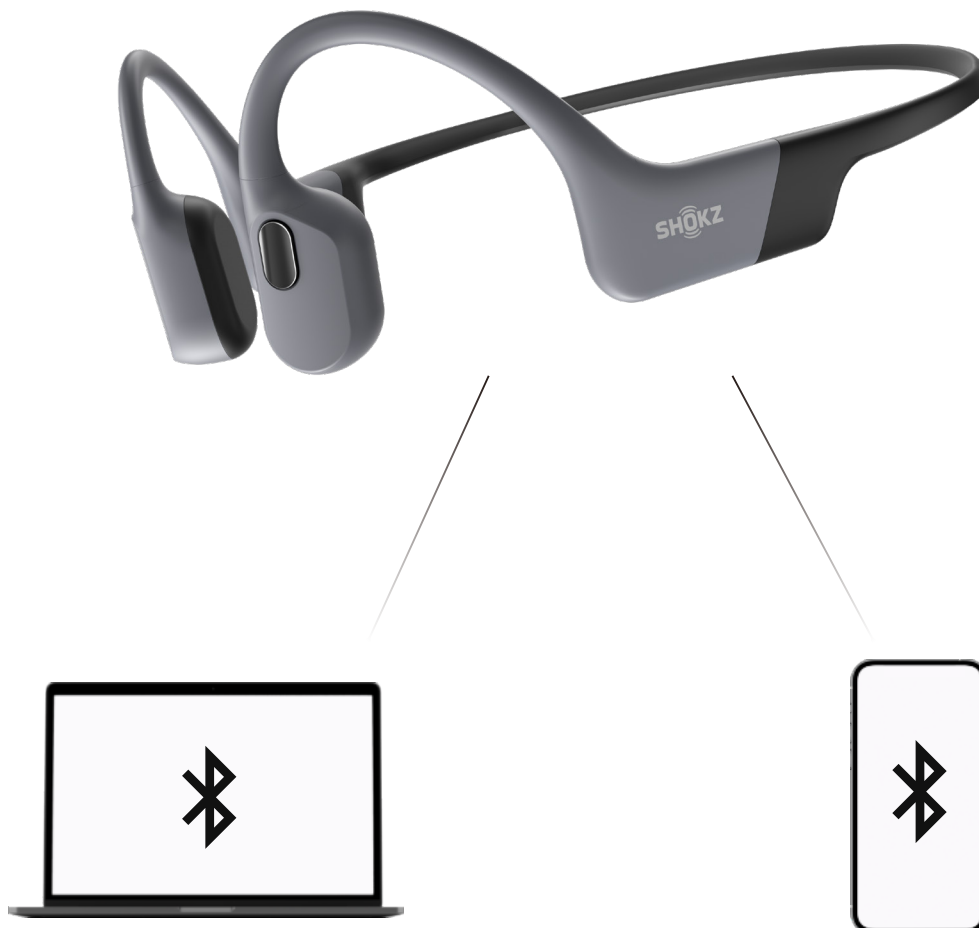

Pair Two Devices

Switch between two devices
seamlessly with multipoint pairing

  
- OFF** Operate controls with headphones powered off

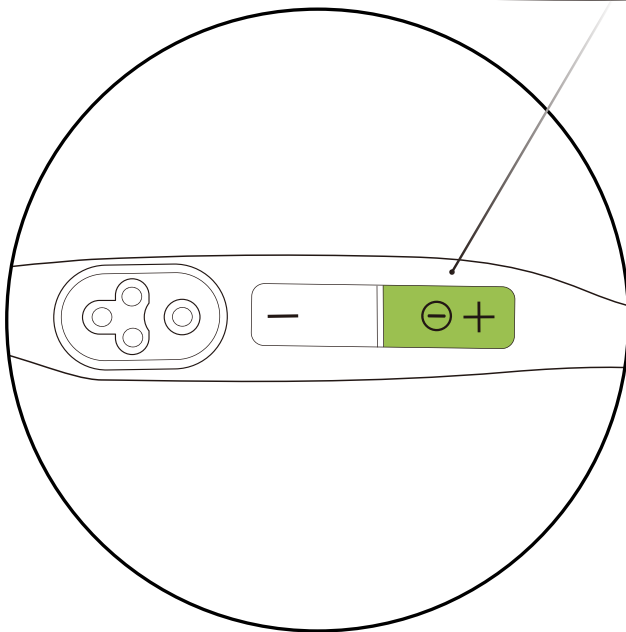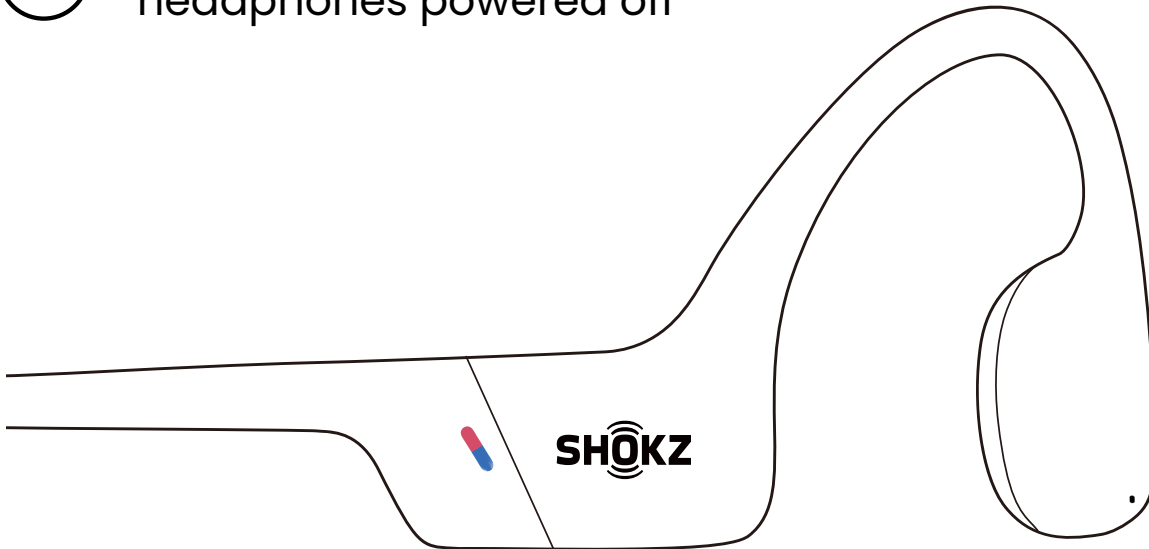


Audrey will say:
“pairing”。



 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say “pairing” and the LED indicator flashes red and blue alternately.

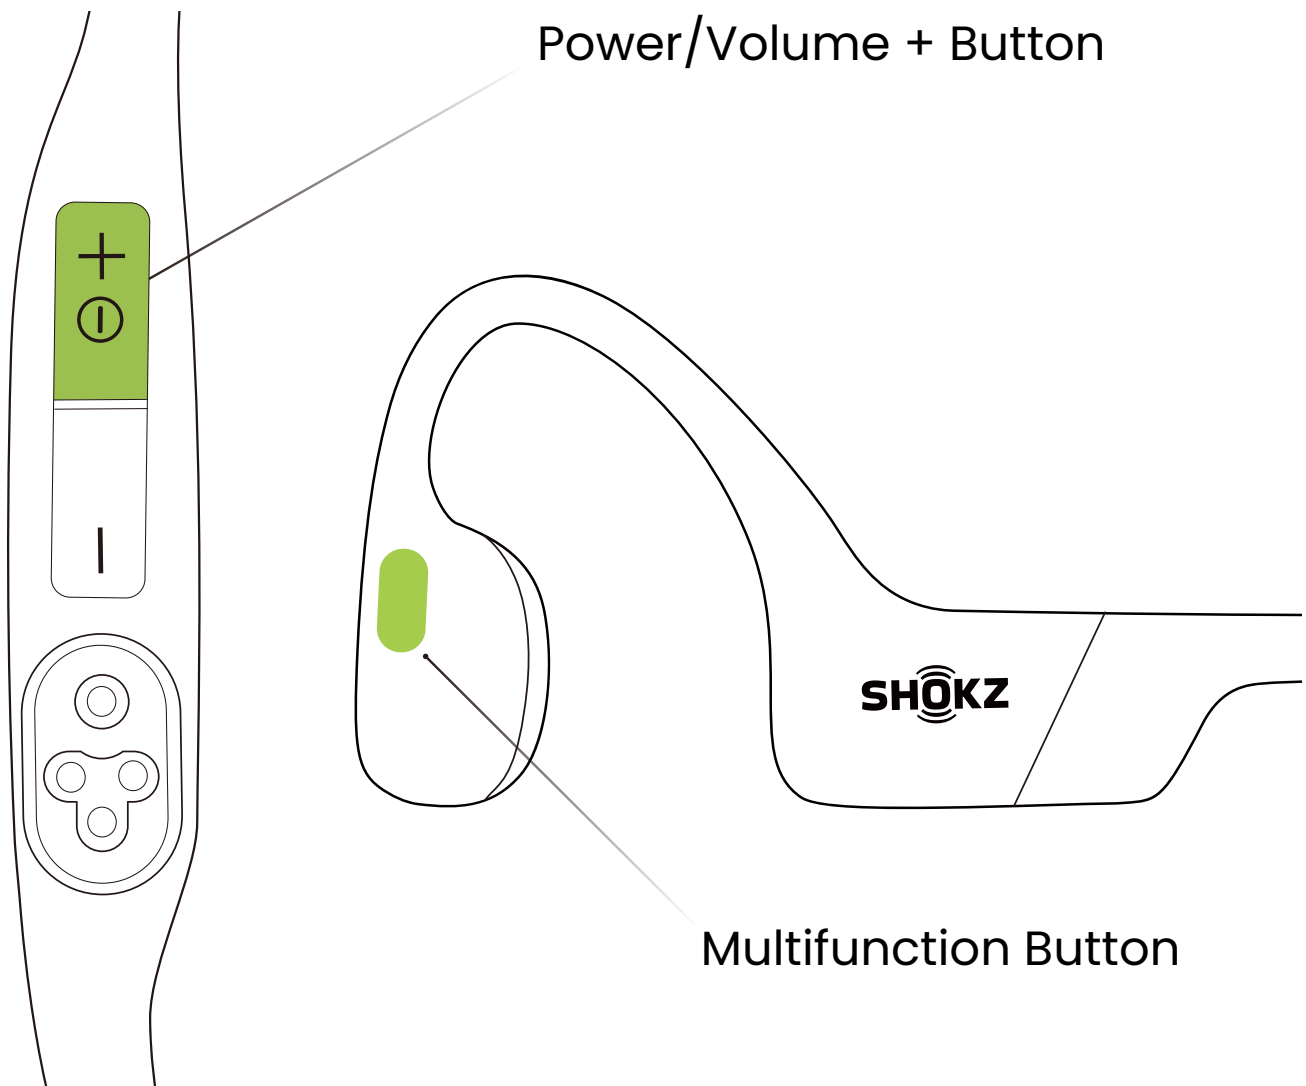

 3. Press and hold the multifunction button and Volume + button until you hear a beep.

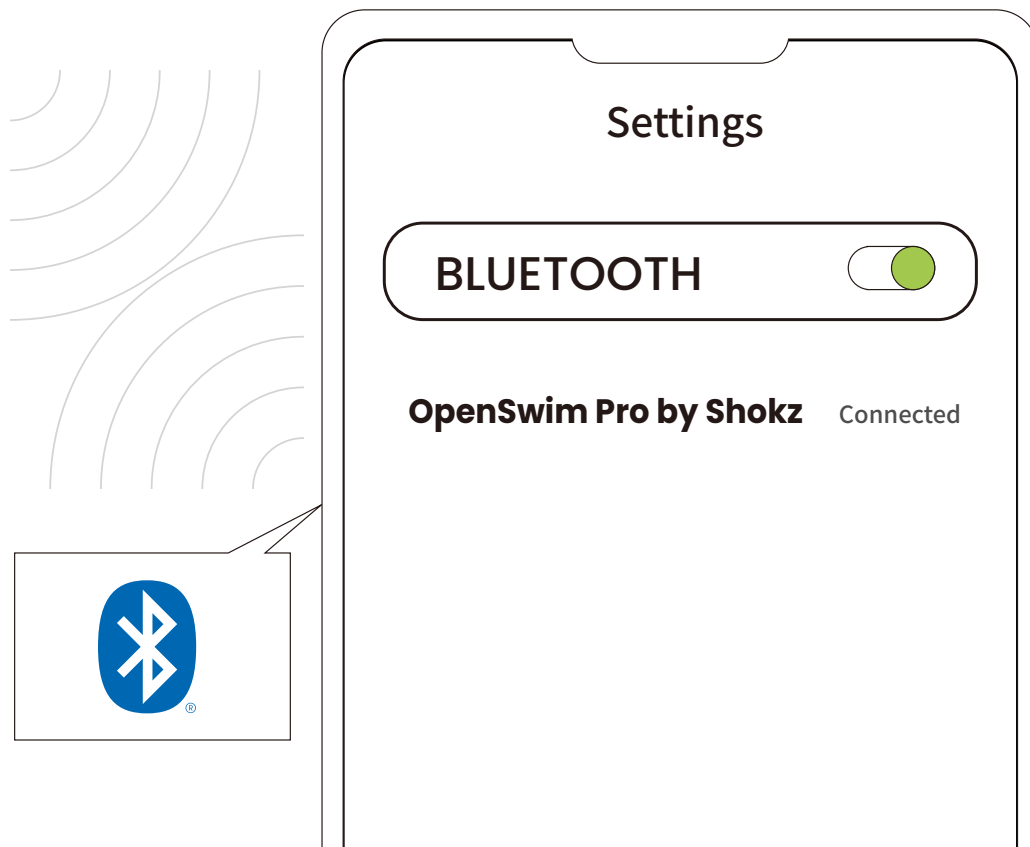


Settings 1

4. Open first device's Bluetooth® menu and select "OpenSwim Pro by Shokz."

*Pairing is completed when the first device shows that pairing is successful.

 5. Turn your headphones off.

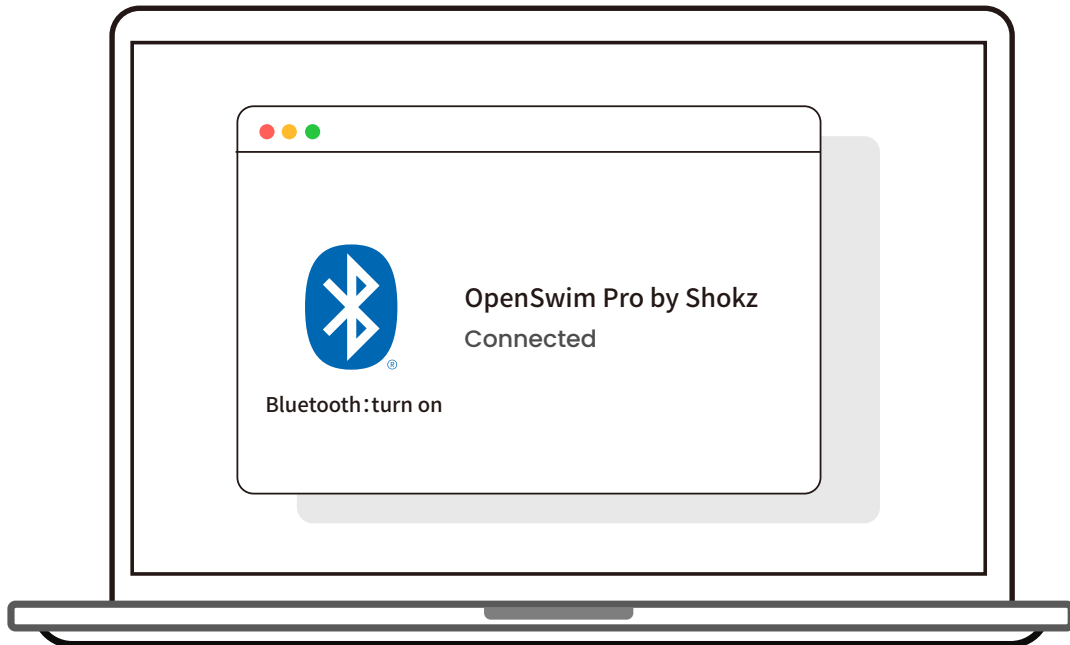

Settings 2

6. Re-enter pairing mode by pressing and holding Volume + until Audrey says "pairing" and the LED indicator flashes red and blue alternately.

7. Open second device's Bluetooth® menu and select "OpenSwim Pro by Shokz."

*Pairing is completed when the second device shows that pairing is successful.

8. Turn your headphones off.

 


9. Turn your headphones on. Your headphones are now connected to both devices.

*You can also use the Shokz App to easily manage multipoint pairing.

Turn Multipoint Pairing Off


OFF Operate controls with headphones powered off

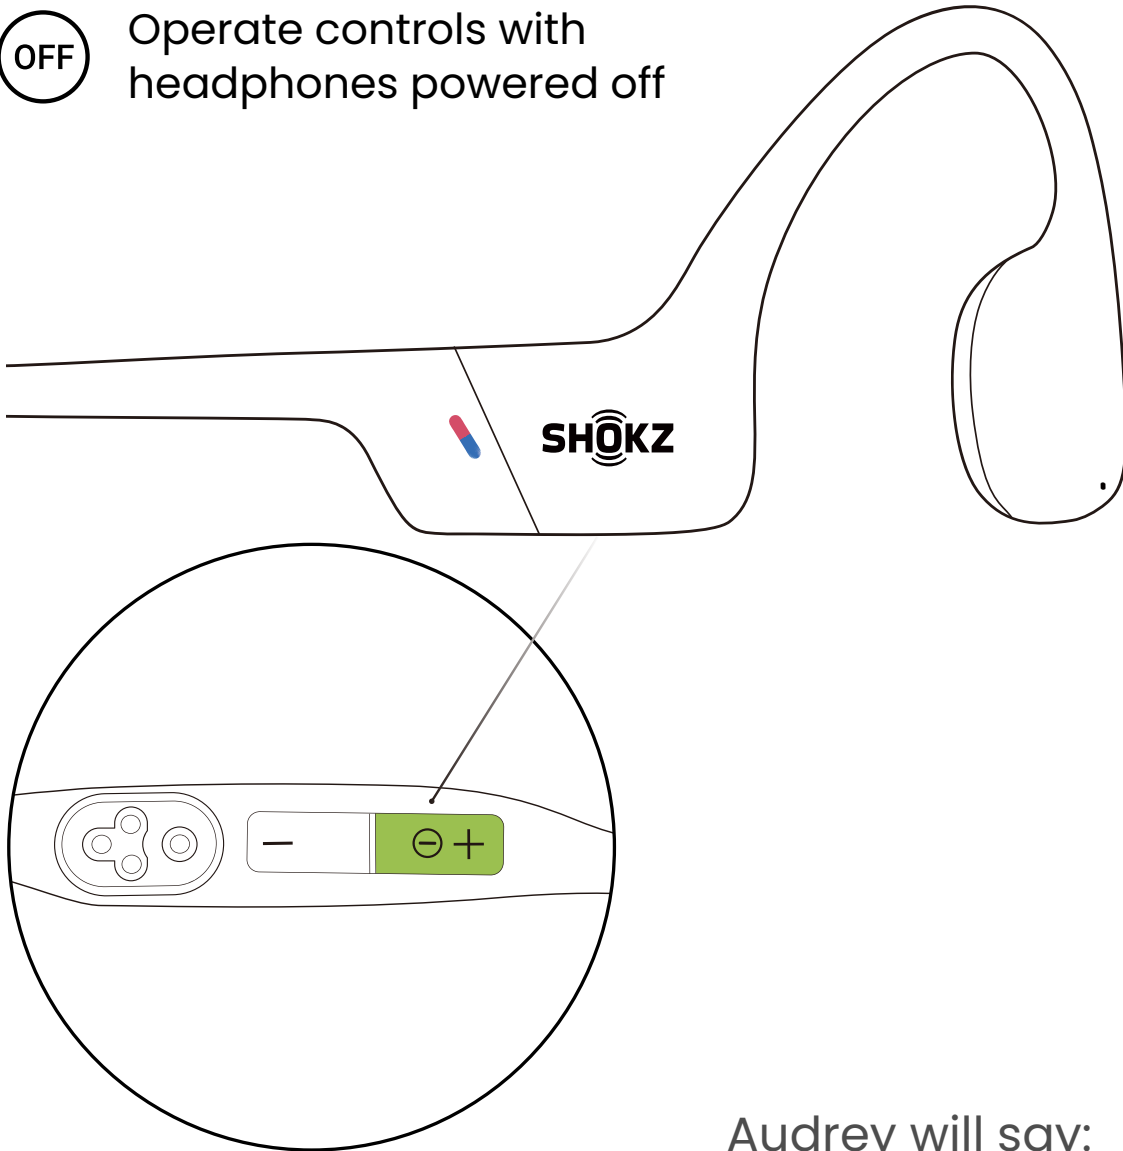

Audrey will say:
“pairing”



 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say “pairing” and the LED indicator flashes red and blue alternately.

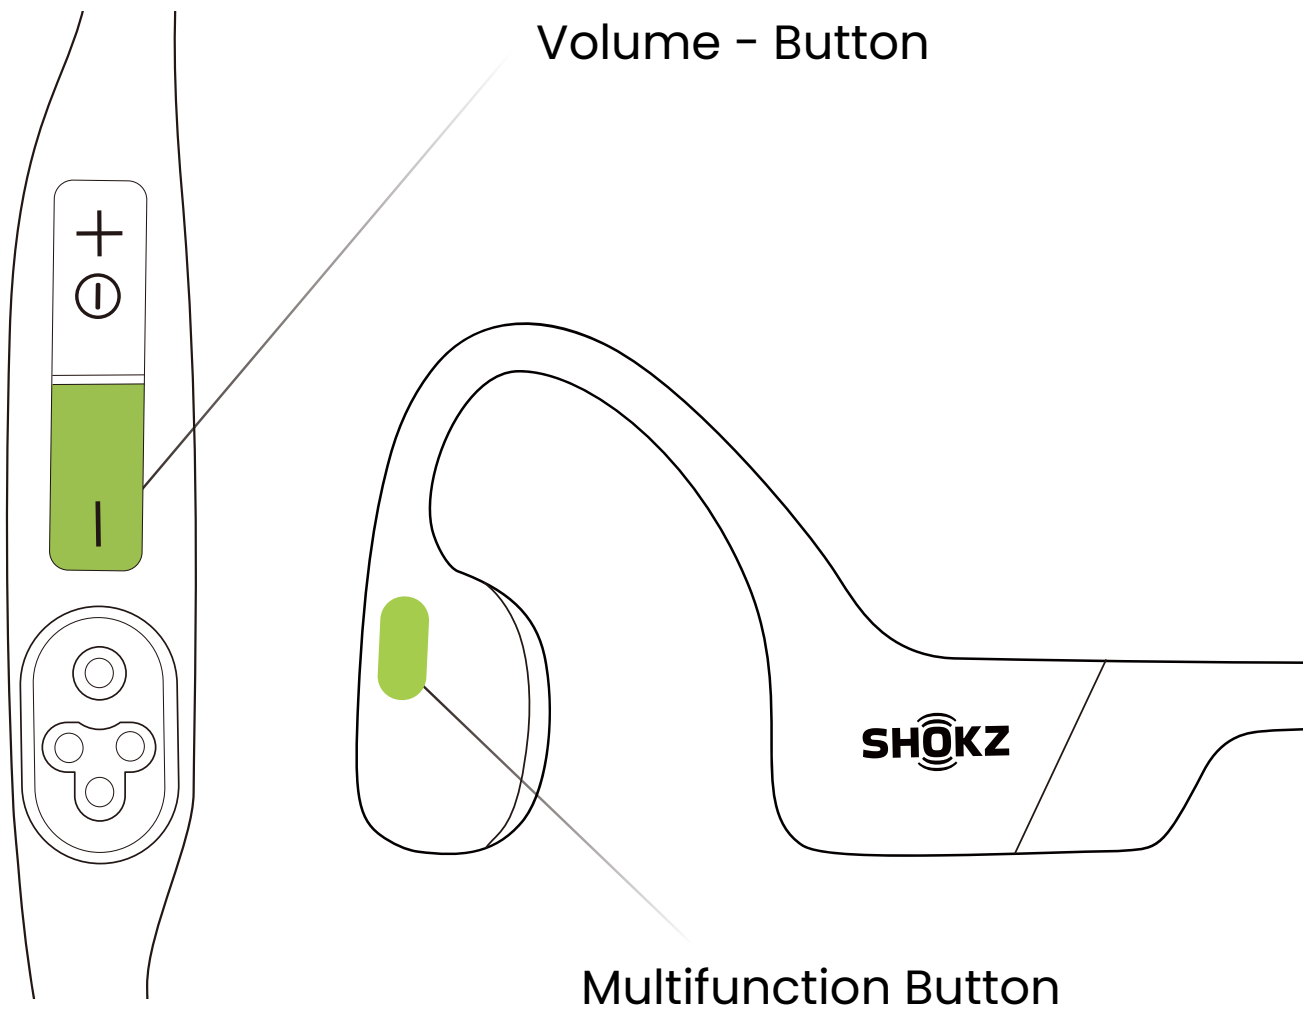


3. Press and hold the multifunction button and Volume - button until you hear a beep.

*You can also use the Shokz App to easily manage multipoint pairing.

Changing Languages

Your headphones have four built-in languages: Chinese, English, Japanese and Korean.

 
OFF Follow the instruction when headphones powered off

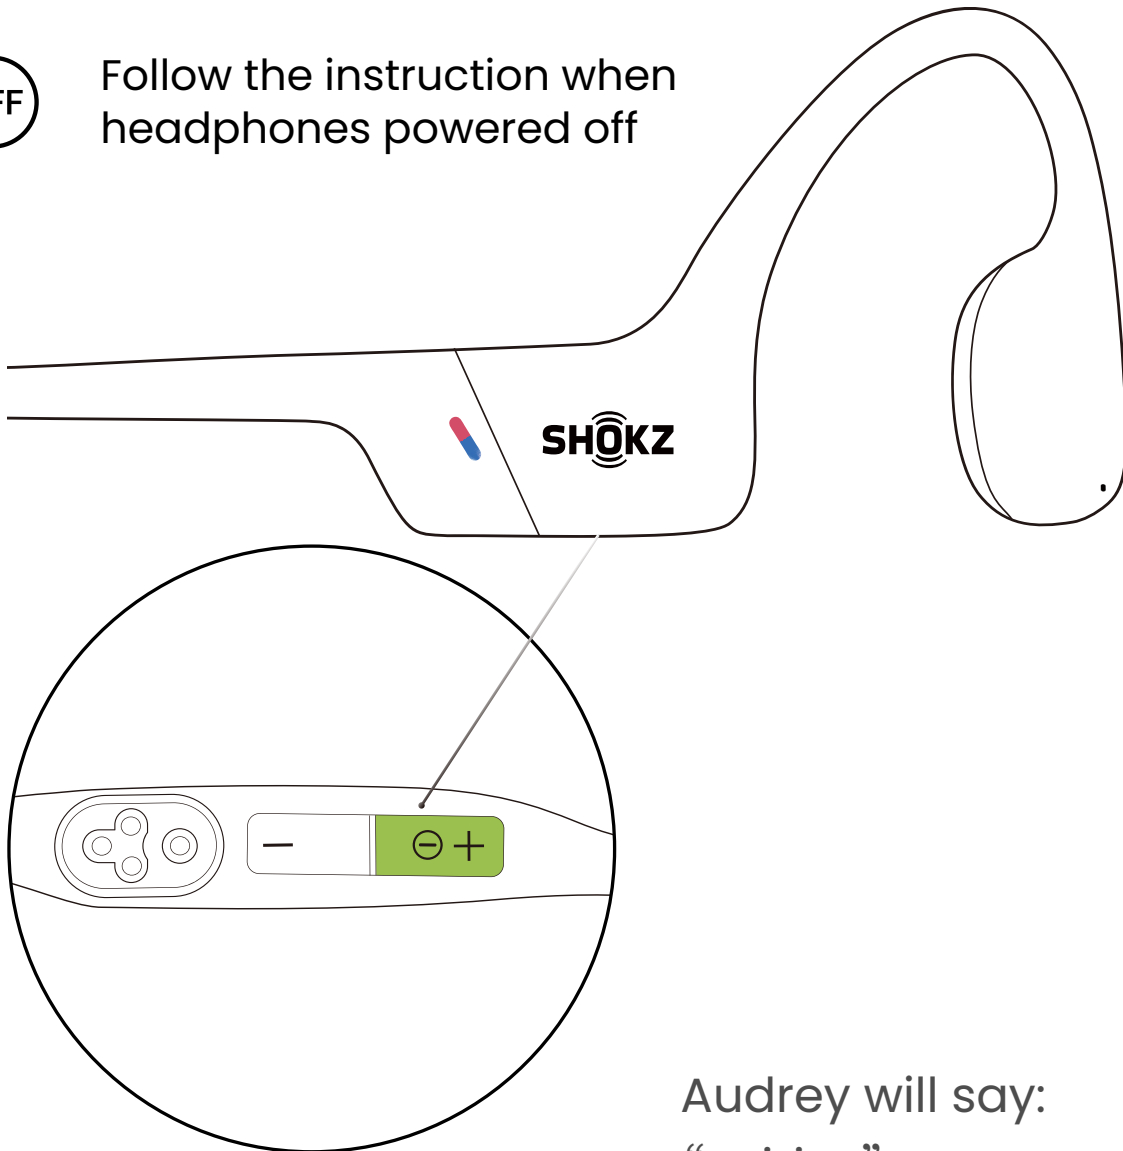

Audrey will say:
"pairing"



 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say "pairing" and the LED indicator flashes red and blue alternately.

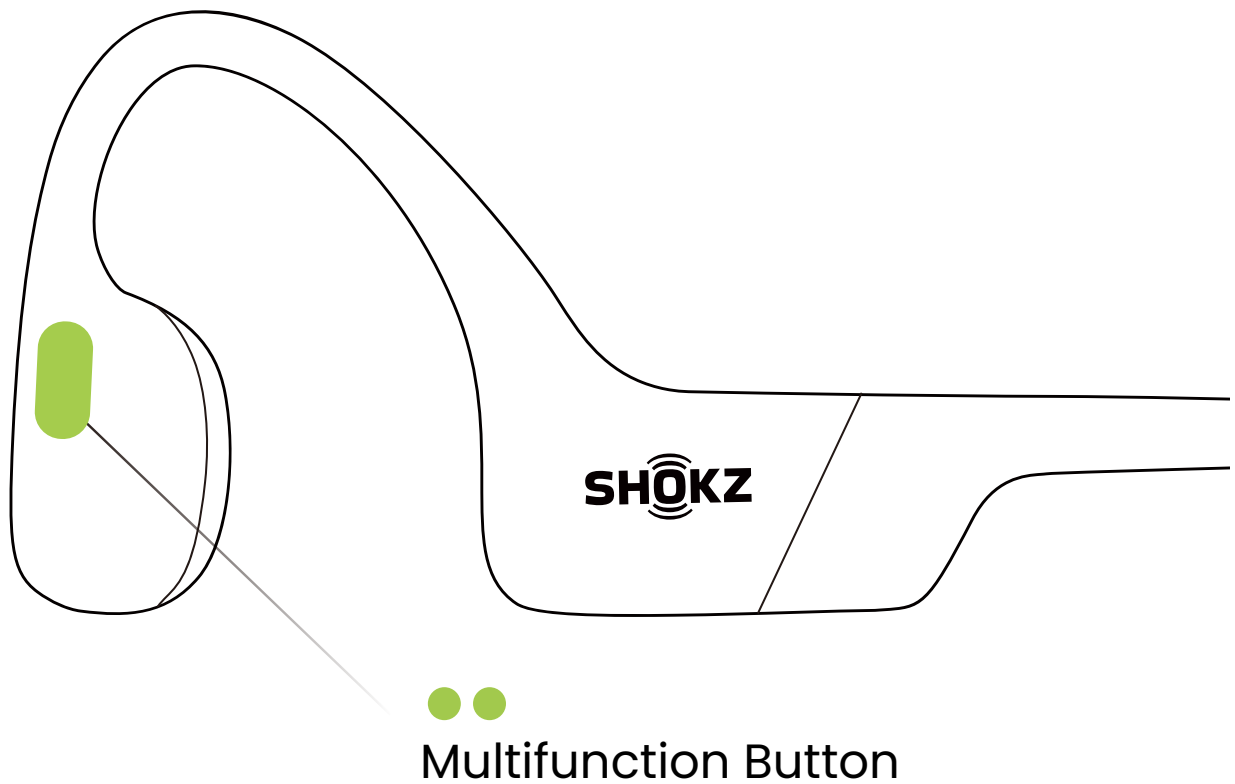

3. Double-click the multifunction button to switch to the next language. The language order is as follows:
English, Chinese, Japanese, and Korean.

 


4. Click the Volume + button or the Volume - button to listen to the voice prompt for battery status, so that to confirm if the right language has been chosen.

*You can also use the Shokz App to change the language.

Restore Factory Settings


OFF Operate controls with headphones powered off

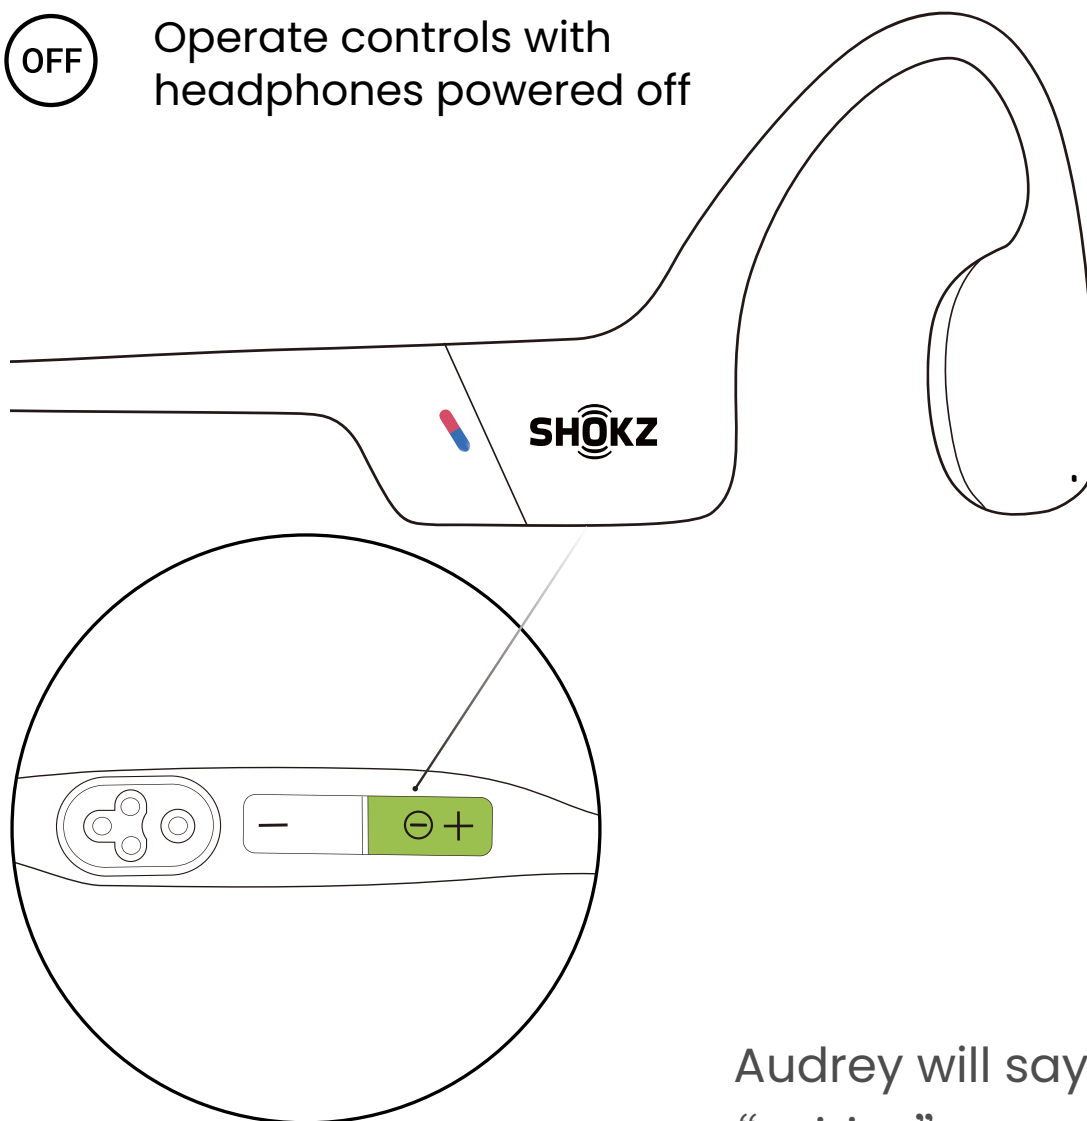

Audrey will say:
"pairing"



 1. Start with your headphones powered off.
2. Press and hold Volume + until Audrey say "pairing" and the LED indicator flashes red and blue alternately.

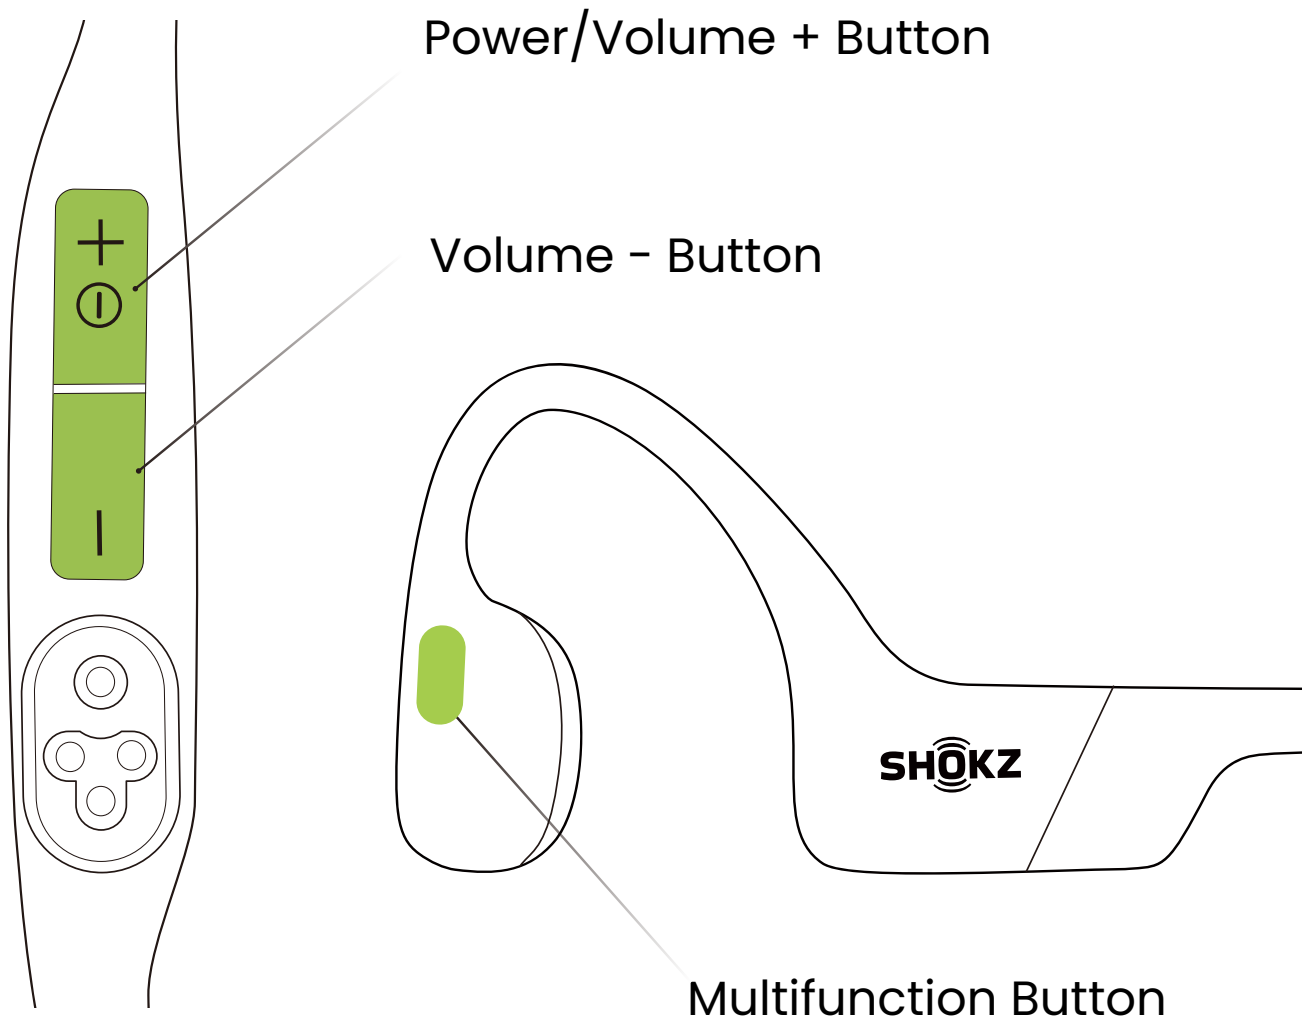

3. Press and hold the multifunction button, the Volume - button, and the Volume + button together until you hear a beep.

 
4. Turn your headphones off. OpenSwim Pro has been reset and needs to be paired again.

*When factory settings are restored, the imported audio files in MP3 will not be deleted.

Care and Maintenance

Charging Tips

OFF The headset will automatically shut down when charging

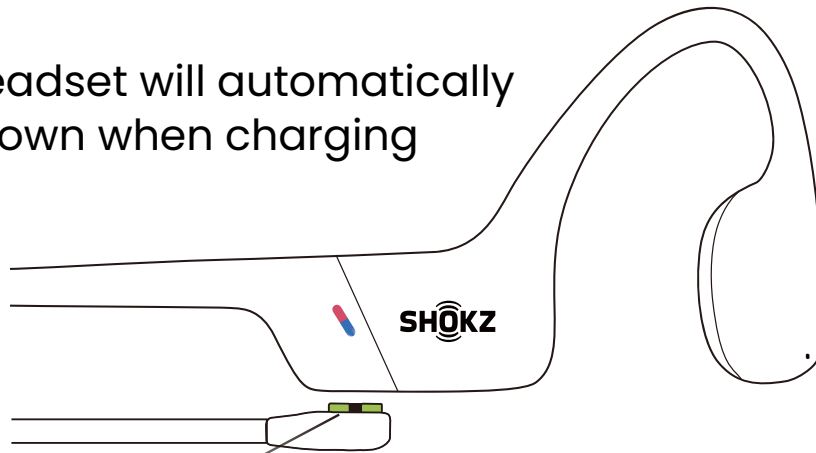

Magnetic Charging Cable



Charging



Charging Completed

When the headphones are at low battery, there will be a **“charge me”** prompt and the red light **will flash intermittently.** Use the corresponding magnetic charging cable for charging. The LED indicator will turn **red** during the charging process and the headphones will automatically turn off. The LED indicator will turn from red to **blue** when charging is complete.

Note:

The headphones will automatically turn off after standing by 2 hours in MP3 mode.

The headphones will automatically turn off after standing by 6 hours in Bluetooth mode.

Warranty

Your headphones are covered by a warranty.

Visit our website at <https://shokz.com/pages/warranty-return> for details of the limited warranty.

To register your product, download the Shokz App.

*Failure to register will not affect your limited warranty rights.

 
Troubleshooting

If you have any trouble or problems, please visit <https://help.shokz.com/s/> for more support!

What's in the Box




OpenSwim Pro
Box

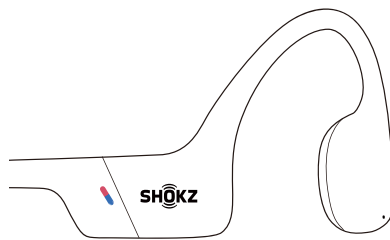

OpenSwim Pro
Headphones



 OpenSwim Pro
Carrying Bag

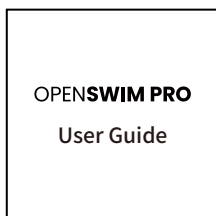


User Guide



warranty card



 Magnetic
Charging Cable

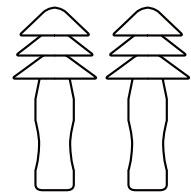

Swimming
Earplugs

If any part of your product is damaged or missing, do not use it. Contact authorized Shokz dealer or Shokz customer service.

*Please note that the packaging envelope may vary depending on the sales region.

SHÖKZ