



QUICK START GUIDE GUIDE DE DÉMARRAGE RAPIDE

 
IMPORTANT:
READ BEFORE USING

IMPORTANT :
LIRE AVANT UTILISATION

CERTIFICATION MODEL:
RECON 200 GEN 2

PACKAGE CONTENTS | CONTENU


- Recon™ 200 Gen 2 Gaming Headset
- USB-C Charging Cable
- Quick Start Guide
- Casque de jeu Recon™ 200 Gen 2
- Câble de chargement USB-C
- Guide d'installation rapide

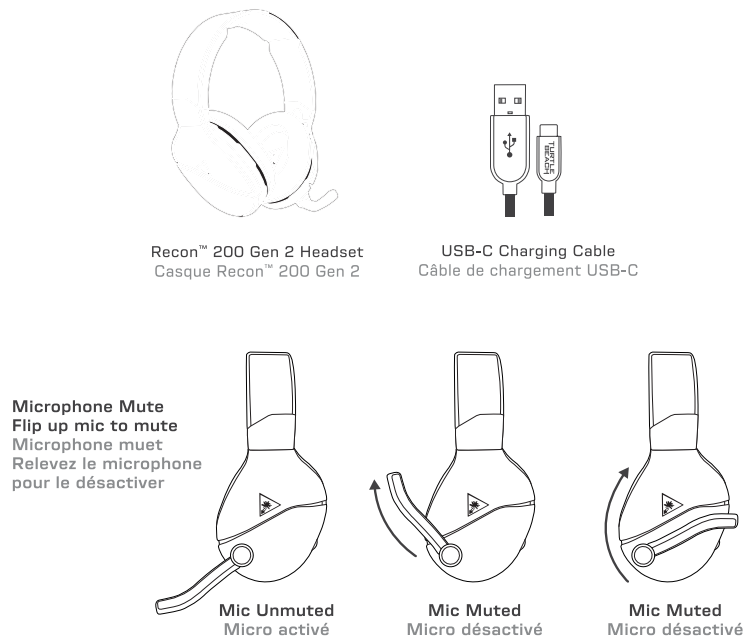

CHARGING | CHARGEMENT

The Recon™ 200 Gen 2 gives you 12 hours of amplified audio with the rechargeable battery. Make sure to charge it regularly! If your battery dies, you will still be able to use the headset for passive game audio and microphone functions.

 Le Recon™ 200 Gen 2 vous offre 12 heures d'autonomie de batterie rechargeable. N'oubliez pas de le recharger régulièrement avant de le ranger. Même sans batterie, vous pourrez toujours utiliser les fonctions audio et microphone passives du casque.

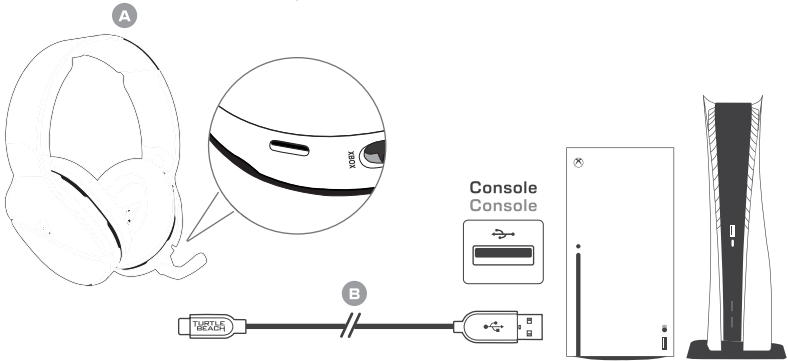

Headset Storage:
Always charge your headset before storing it for any extended period of time (greater than 3 months). Never store the unit in temperatures above 113°F/45°C.

Rangement du casque:
Chargez toujours votre casque avant de le ranger pour une longue durée (plus de 3 mois). Ne stockez jamais le casque à des températures supérieures à 45°C.

SETUP FOR PS5™ | CONFIGURATION POUR PS5™

EN

1. Set Power/Console Mode Switch to "PS"
2. Go to Settings > Sound > Audio Output > Output Device
3. Select Headset Connected To Controller for Output Device
4. Set Output to Headphones to All Audio
5. Go to Settings > Sound > Volume > Headphones
6. Set Volume Control (headphones) level to Maximum
7. Adjust your microphone levels by going to Settings > Sound > Microphone > Adjust Mic Level > Microphone Level

ES

1. Ajusta el interruptor de encendido/modo de consola en "PS"
2. Ve a Configuración > Sonido > Salida de sonido > Dispositivo de salida.
3. Selecciona los auriculares conectados al mando como dispositivo de salida.
4. Establece los auriculares como salida para todo el sonido.
5. Ve a Configuración > Sonido > Volumen > Auriculares.
6. Establece el nivel de control del volumen [auriculares] al máximo.
7. Ajusta los niveles del micrófono desde Configuración > Sonido > Micrófono > Ajustar nivel de micrófono > Nivel de micrófono.

JP

1. 電源/コンソールモードのスイッチを「PS」に設定
2. [設定] > [サウンド] > [オーディオ出力] > [出力デバイス] の順に移動します。
3. コントローラーに接続されている出力機器用のヘッドセットを選択します。
4. [ヘッドホンへの出力] を [すべてのオーディオ] に設定します。
5. [設定] > [サウンド] > [音量] > [ヘッドホン] の順に移動します。
6. [ボリュームコントロール] へ (ヘッドホン) を最大に設定します。
7. [設定] > [サウンド] > [マイク] > [マイクレベルを調整する] > [マイクレベル] からマイクレベルを調整します。

FR

1. Définissez le bouton du mode Alimentation/Console sur « PS »
2. Rendez-vous dans Paramètres > Son > Sortie audio > Périphérique de sortie
3. Sélectionnez Casque connecté à la manette en tant que Périphérique de sortie
4. Réglez la Sortie vers les écouteurs sur Tout l'audio
5. Allez dans Paramètres > Son > Volume > Casque
6. Réglez le Contrôle du volume [casque] sur la valeur maximum
7. Ajustez les niveaux de votre microphone en allant dans Paramètres > Son > Microphone > Ajuster niveau microphone > Niveau microphone

DE

1. Den Energie-/Konsolenmodus auf "PS" einstellen
2. Gehe zu Einstellungen > Ton > Audioausgabe > Ausgabegerät
3. Wähle „Headset mit Controller verbunden“ als Ausgabegerät
4. Stelle den Ausgang für Kopfhörer auf „Alles Audio“
5. Gehe zu Einstellungen > Ton > Lautstärke > Kopfhörer
6. Stelle die Lautstärke-Regelung [Kopfhörer] auf Maximum
7. Passe den Mikrofonpegel an, indem du zu Einstellungen > Ton > Mikrofon > Mikrofonpegel anpassen > Mikrofonpegel gehst


KR

1. 전원/콘솔 모드 스위치를 "PS"로 설정하세요
2. 설정 >> 사운드 >> 오디오 출력 >> 출력 디바이스 이 동합니다.
3. 컨트롤러에 연결된 헤드셋을 출력 디바이스로 선택합니다.
4. 헤드폰 출력을 전체 오디오 모드로 설정합니다.
5. 설정 >> 사운드 >> 볼륨 >> 헤드폰으로 이동합니다.
6. 볼륨 컨트롤(헤드폰)레벨을 최대로 설정합니다.
7. 설정 >> 사운드 >> 마이크 >> 마이크 레벨 조정 >> 마이크 레벨로 이동해 마이크 레벨을 조정합니다.

For PS4™ setup search "Recon 200 PS Setup" at www.turtlebeach.com/support

Pour la configuration de la PS4™, cherchez "Recon 200 PS Configuration" sur www.turtlebeach.com/support

HEADSET CONTROLS | COMMANDES DU CASQUE

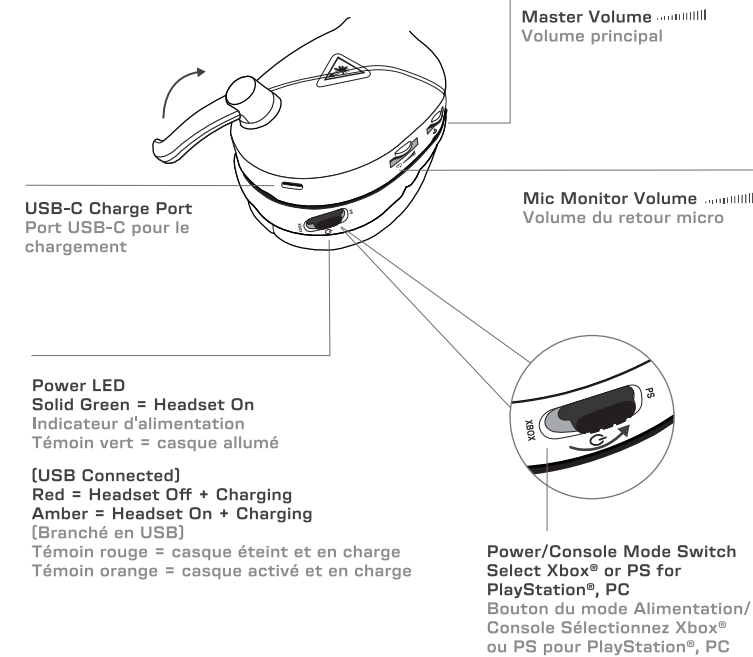 

SETUP FOR XBOX® | CONFIGURATION POUR XBOX®

EN

1. Set Power/Console Mode Switch to "Xbox"
2. Press the Xbox Button on your controller
3. Go to the Audio & music settings []
4. Set Headset Volume to maximum
5. Set Headset Chat Mixer to the middle setting
6. Set Mic Monitoring to your preferred level

ES

1. Ajusta el interruptor de encendido/modo de consola en "Xbox"
2. Pulsa el botón Xbox de tu mando.
3. Ve a la configuración de Audio y música. []
4. Ajusta el Volumen de los auriculares al máximo.
5. Ajusta el mezclador de chat de los auriculares a la mitad.
6. Ajusta Supervisión del micrófono al nivel que prefieras.

JP

1. 電源/コンソールモードのスイッチを「Xbox」に設定
2. コントローラの Xbox ボタンを押します。
3. [オーディオ & ミュージック] を選択します。[]
4. [ヘッドセット音量] を最大にします。
5. [ヘッドセットチャットミキサー] を中程度に設定にします。
6. [ヘッドセット側の音量調節] をお好みのレベルに調整します。

KR


1. 전원/콘솔 모드 스위치를 "Xbox"로 설정하세요
2. 컨트롤러의 Xbox 버튼을 누릅니다.
3. 오디오 음악 설정으로 이동합니다. []
4. 헤드셋 음량을 최대로 설정합니다.
5. 헤드셋 채팅믹서를 중간값으로 설정합니다.
6. 마이크 모니터링을 원하는 레벨로 설정합니다.

Note: If your PC uses separate Green/Pink connectors for audio, you will need a PC Splitter Cable. This adapter can be purchased separately at [turtlebeach.com](http://www.turtlebeach.com).

Remarque : Si votre PC utilise des connecteurs vert/rose séparés pour l'audio, vous aurez besoin d'un câble séparateur PC.

Cet adaptateur peut être acheté séparément sur [turtlebeach.com](http://www.turtlebeach.com).

SETUP | CONFIGURATION

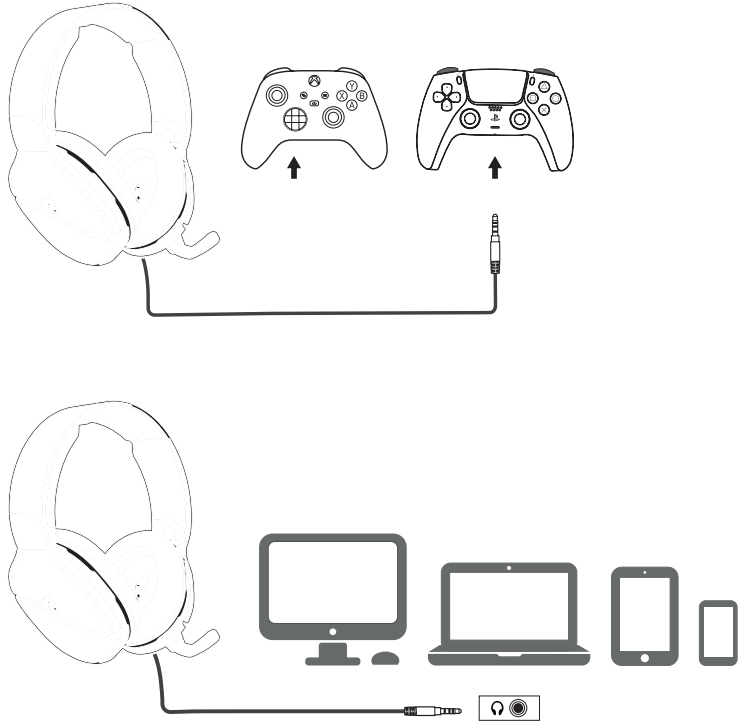 

Regulatory Compliance Statements for the Recon™ 200 Gen 2 (Certification model: Recon™ 200 Gen 2)
Federal Communications Commission (FCC) Compliance Notices
Class B Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15, Subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product is compliant with the Consumer Product Safety Improvement Act of 2008, Public Law 110-314 (CPSIA)

ISED Canada compliance statement

This device complies with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada exempt(s) de licence(s) applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage ;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

European Union and European Fair Trade Association (EFTA) Regulatory Compliance

Declaration of Conformity

Marking by this symbol:



Hereby, Voyetra Turtle Beach Inc. declares that Recon™ 200 Gen 2 is in compliance with Directive 2014/30/EU(EMC), 2014/35/EU(Safety), 2015/863 amending Annex II to 2011/65/EC(RoHS), 2012/19/EU (WEEE), 2006/1907/EU (REACH), 94/62/EC (PACKAGING), 2006/68/EC (Battery), Electromagnetic Compatibility Regulations 2016(EMC), Electrical Equipment Regulations 2016(Safety), The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

The full text of the EU/UK declaration of conformity is available at the following internet address:

<http://www.turtlebeach.com/homologation>



This symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Turtle Beach Europe Ltd is obligated as a producer with a main activity of selling under The Producer Responsibility Obligations (Packaging Waste) Regulations 2007. To fulfil our obligation we are registered with Comply Direct and their Recycling Room. Here you will find advice and information on packaging waste management, recycling symbols and the waste hierarchy principles of reduce, reuse and recycle.

<https://www.complydirect.com/the-recycling-room/>

For instructions in other languages, please visit <http://www.turtlebeach.com/homologation>

For warranty information and service, please visit www.turtlebeach.com/warranty

WARRANTY SERVICE FOR PURCHASES IN AUSTRALIA

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. For complete details please visit www.turtlebeach.com/warranty.

To make a warranty claim in Australia during the Warranty Period, Purchaser should contact the VTB repair centre: Tecworks International Pty Ltd, 13 Distribution Place, Seven Hills NSW 2147, Tel: 1300 074 512

Copyright © 2024, Voyetra Turtle Beach, Inc. All rights reserved. No part of this document may be reproduced without permission. Turtle Beach and the Turtle Beach logo are registered trademarks of VTB.



この装置は、ラジアス電波特性を有する。この装置は、家庭環境で使用することをお勧めしています。この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをしてください。 VCCI-B