 


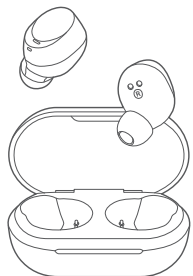

QCY ArcBuds Lite

True Wireless Earbuds

 
 


For better using experience, please scan to download QCY APP before start-up.

Overview

Choose Your Eartips:

Please try medium eartips first as they fit most people.

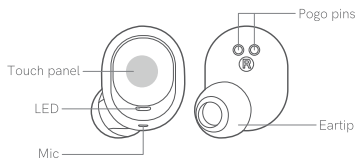

Charging case



Type-C cable



Eartips

Above pictures are for reference only yet practical accessories may vary.

 
How to Connect

First Time Connection:

1. Pick up both earbuds, pop both earbuds into the case to activate them.
 2. Pick up both earbuds again.
 3. On cellphone, search QCY ArcBuds Lite and tap to connect.
- * Pick them up and they will auto power on, otherwise please charge and try again.

Switch Connected Device:


1. Turn off phoneA's Bluetooth faculty and earbuds will auto disconnect and turn connectable.
 2. On phoneB, search QCY ArcBuds Lite and tap to connect.
- * Multi-point connection is not available. Earbuds will auto reconnect to phoneB upon powering up again.

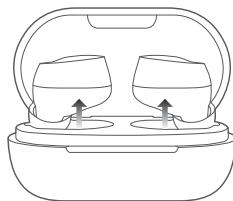

Factory Setting

Delete Connectivity Records:

 - (Try the following steps if earbuds fail to be connected)
1. Push earbuds into case touch both panels 5 times or until LEDs blink white 5 times to reset them factory.
 - * Refer How to Connect after Factory Setting.

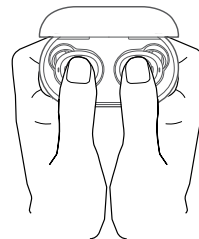

How to Wear



1. Please put on earbuds properly then adjust them to fit yourself.
2. Keep microphone towards your mouth.
3. It will cause a bad calling or listening experience to wear them in a wrong way.

 
LED on Earbud

LED will glow solid red when earbud is charged and turn white for 30s after top-up.

LED on Earbud

LED will blink white when case is charged and turn solid white after top-up.
Push earbuds into case and LED will turn white for 4s or blink white for 4s if the case is with low battery.

Functions

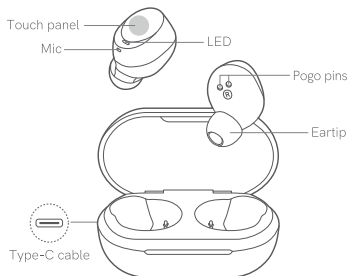

- ① Power-on: Pick up earbuds/Keep touching panel for 1.5s
- ② Power-off: Push earbud back in case.
- ③ Answer/end call: Double touch panel
- ④ Ignore call: Keep touching panel for 1.5s
- ⑤ Skip track backward: Keep touching left panel for 1.5s
- ⑥ Skip track forward: Keep touching right panel for 1.5s
- ⑦ Voice assistant: Triple touch left panel
- ⑧ Playback/pause: Double touch panel
- ⑨ Gaming mode: Triple touch right panel

Warranty Card

Warranty Period
12 months after you purchase this item (or you may inquire your local shopper for more details).
Free Service:
Supposing any defects caused by quality issues occur within the warranty period, please take this warranty card and purchase receipts to your distributor for free exchange service.

Model Number:
Date of Purchasing:
User's Name:
User's Phone:
User's Address:
Shop's Name:
Shop's Address:
Comments:

Free exchange service will not be accessed under following circumstances:

1. Damages caused unauthorized disassembly.
2. Defects or physical damages caused by leaking or dropping off.
3. Damages by act of God. Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Tips

1. Before using the earbuds, please read the manual carefully and keep it for future references.
2. The earbuds need to be fully charged prior to first-time use.
3. If the earbuds are left unused for over two weeks, please recharge.
4. Please use the chargers made by qualified manufacturer.
5. If earbuds fail to be found by phone, please re-turn them connectable or restore factory settings. If a program error of phone occurs, please turn off and on Bluetooth function or reboot the phone.

Caveats

1. Never disassemble or modify your earbuds for any reasons to avoid any damages and danger.
2. Do not store the earbuds in extreme temperatures (under 0°C or over 45°C).
3. Avoid using the indicator close to the eyes of children or animals.
4. Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electric shock.
5. Do not use harsh chemicals or strong detergents to clean the earbuds.

Note: please do not use earbuds for a long time as may damage your hearing.

Notes: Please arrange using time properly as your hearing may be damaged by using the device for a long time.
Manufacturer: Dongguan Hele Electronics Co., Ltd.
Address: No. 325 Yuehui Rd, Daojiao Town Dongguan City Guangdong Province China

