





FLAME AROMA DIFFUSER
TLL441121/TLL441131
User guide



INTO YOUR FUTURE


Product Diagram

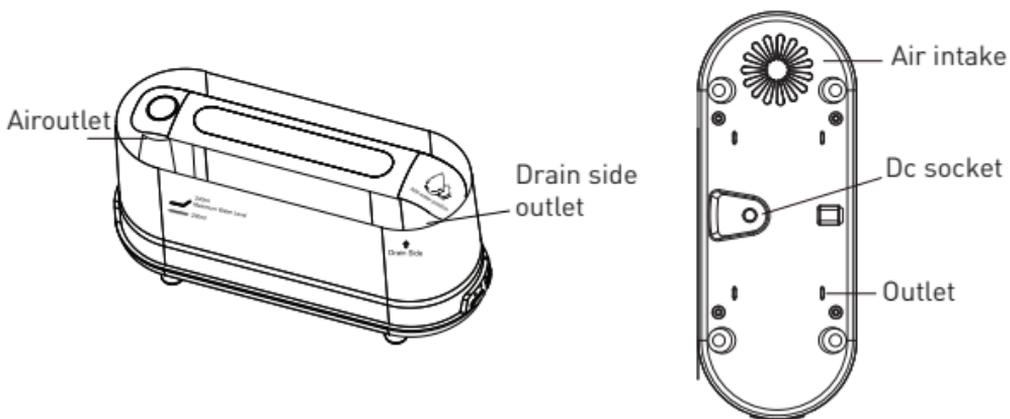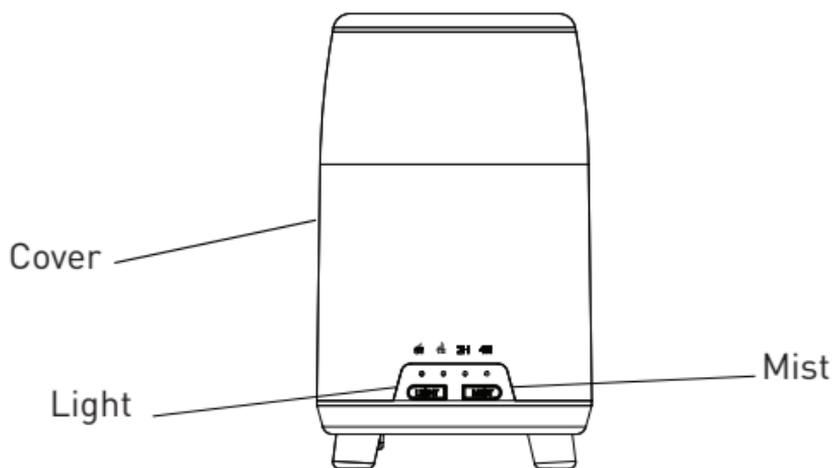


This Aroma Diffuser uses Ultrasonic Technology to instantly vaporize the water from tank, producing a cool, dry, fragrant mist.

Operation steps

1. Keep the product straight and remove the top cover, on vertical direction.

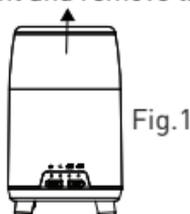


2. Please, connect the AC adaptor to the DC jack, from the base of the main body.

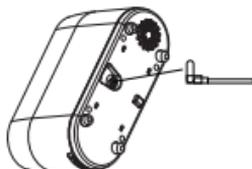


3. Please, use the measure cup to supply with water (Do not add, high temperature water), and also, pay attention, to the water level; do not exceed the max. line (240 ml). Please, do not add water when the product is working.



4. Install the top cover of the main body, exactly like the initial position.
Note: The top cover must be in position when the product is in use.

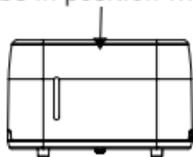

5. Press the "MIST" button, and choose the time needed, (high mist output, low mist output, 2H, 4H). Long press the "MIST" button to turn off the device.

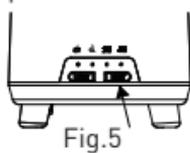

6. Press the "LIGHT" button, to adjust the light mode and intensity - Strong light(default)/weak light/breathing light.



Fig.6

7. If you do not use the diffuser, for long time, please, drain out the water and dry the tank. If you want to use it again, please, use a neutral detergent to clean the water tank, and after that, you can use it.

8. When the power supply is switched on, the initial state of the aromatherapy diffuser, is off.

9. If is lack of water, in the tank, even though the MIST button is switch on, the diffuser will automatically turn off.

10. The mist and the light, automatically turns off, when the water from tank, is finished.


Precautions

- Product use time: about 12 hours for high mist, 15 hours for low mist
- The amount and intensity of the mist produced, will vary, but this is not unusual and should not be considered the device's fault.
- Factors that affect this include the water type, humidity, air currents.
- The power supply automatic off when the water run out.

Accidental leakage

In the event of the device being knocked over or tipped during use, please, follow the steps as below to avoid malfunction:

1. Unplug the unit and remove cover.
2. Take out, any remaining water in the tank.
3. Shake the device gently, to drain the water, and leave it to dry, for at least 24 hours.

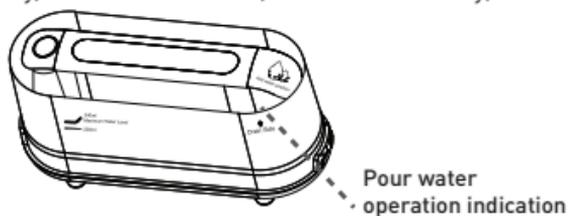


Maintenance

After using 3-5 days, please, clean the product as follow:

1. Unplug the unit from main supply and remove the top cover.
2. Take out any remaining water in the tank.
3. Add a small amount of warm water and kitchen detergent remover, use a swab to wipe it gently and then use a cleaning cloth to dry lightly.
4. Refer to the following pictures to avoid that water flows into the air outlet, take out the water as shown in the left image, not the one in the right.

5. Do not use acids, or enzymes detergents, as this may produce poisonous gases or cause malfunctions.

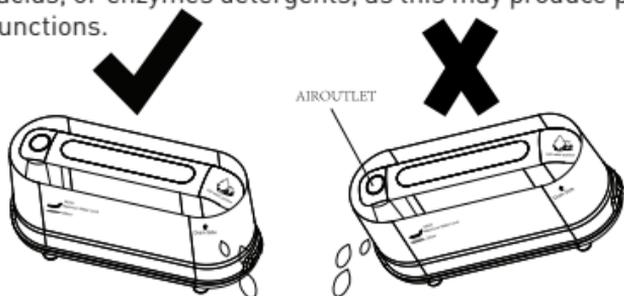

Note: Be sure to use a mild detergent.

Safety instructions

Please, follow the indications below to avoid malfunction of the aroma diffuser:

- Do not fill over 240 ml "Maximum water level". Suggestion: use ~ 200ml of water.
- Do not switch on the power when the tank is empty.
- Do not touch the Ultrasonic vibration plate.
- Clean regularly to avoid malfunction.
- Always unplug the device from the power supply before maintenance.
- For hygiene reasons, after use, pour away the remaining water from the tank (remember the DRAIN SIDE), and wipe it, with a clean cloth.
- The essential oils, can stain, in the event of spillage, please, wipe away with a soft cloth.
- Only use the measuring water cup, to add the water in the tank, do not fill it directly from the water pipe.
- Do not let the mist to migrate onto furniture, clothing, walls etc.
- Keep it away, from direct sunshine heat sources, air conditioned, or fans.
- Always keep on stable flat surfaces, do not place it on the carpet, duvet, or unstable areas.
- Keep it away from electronic equipment such as TV, or Auto equipment.
- Do not tip the product this may cause water to enter the mechanism and cause malfunction. Product use time: about 12 hours for high mist, 15 hours for low mist.
- Wait 60 minutes before restart to avoid damage to Ultrasonic plate.
- Use tap water only, or distilled water.
- Never move the product when it is working.
- Do not touch any part of the product with wet hands.
- Keep out of reach of children and pets. Children not being supervised should not play with the product. Appliance is not suitable for children or persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge to use it, unless they are supervised.
- Keep the cord clear of obstacles and do not pull it, forcefully. If smoke or burning smell detected, unplug the device, immediately.

TROUBLESHOOTING

Please, refer to the table below in the event of the product operating abnormally:

If the product does not work well, please, refer to the following points before requesting repairs.

Will not switch on or switch off	<ul style="list-style-type: none">• Is there enough water in the tank? - Please, add water to the tank• Is the power cord connected properly? - Please, disconnect, check, and reconnect it, carefully.
No mist or abnormal mist	<ul style="list-style-type: none">• Not enough water? Too much water? - Please, add suitable amount of water in the tank, water level must never be over the line of 240 ml (MAX).• Dirt on the Ultrasonic plate? - Please, refer to maintenance instruction, remove and reinstall correctly, so the vapors can be released freely.• The top cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base? - If it is too much dust in the air suction port, the mist will be restricted to come out. Just clean it.
Water leakage from the product	<ul style="list-style-type: none">• The top cover and inner parts are not installed properly? - Remove and reinstall correctly, so the vapors can be released freely.• Low temperature or high humidity? - Under these conditions the mist may condense quickly into water droplets.

TECHINICAL SPECIFICATIONS

Voltage: AC100-240V / DC/24V 500MA

Capacity: 240ml

Max power: 14W

Ultrasonic frequency: 2.4MHz

Operation time: Up to 15 hours

Vapor power: 16-20ml/h

Vapor level: Light or powerful

Light mode intensity: Strong (default), weak, breathing light

Timer: ON/2H/4H

Lighting: LED

Low water protection: Auto shutdown

Coverage area: Up to 30m²

Power cord length: 150cm

Color: White/Grey

Package includes:

-Aroma Diffuser

-AC/DC Adapter

-Remote control

-Water cup


-User Manual

Essential oils: Not included

Product dimensions: 210*135*81mm

Product weight: 479g

REMOTE CONTROL

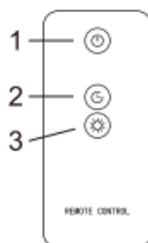

No.	Button	Function
1	ON/OFF	ON/OFF
2	MIST	To select high mist output, low mist output, 2H, 4H.
3	LIGHT	Press "LIGHT" to adjust the light mode: Strong light(default)/weak light/breathing light.



Disposal and recycling information

The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage.

It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of waste electrical and electronic equipment (WEEE) and batteries according to local laws.

Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment, improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.